WW70H5200E*

Washing Machine

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

Imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

contents

SETTING UP YOUR WASHING MACHINE 11

11 Checking the parts
12 Meeting installation requirements
12 Electrical supply and grounding
12 Water Supply
13 Drain
13 Flooring
13 Surrounding temperature
13 Alcove or closet installation
13 Installing your washing machine

WASHING A LOAD OF LAUNDRY 19

19 Washing for the first time
19 Basic instructions
20 Using the control panel
23 Child lock
23 Sound off
23 Delay end
24 My cycle
24 Smart Care
25 Eco Bubble
26 Washing clothes using the cycle selector
27 Washing clothes manually
27 Laundry guidelines
28 Detergent and additives information
28 Which detergent to use
29 Detergent drawer
29 Liquid Detergent (Selected models)

CLEANING AND MAINTAINING YOUR WASHING MACHINE 30

30 Eco Drum Clean
31 Draining the washing machine in an emergency
32 Cleaning the debris filter
32 Cleaning the exterior
33 Cleaning the detergent drawer and drawer recess
33 Cleaning the water hose mesh filter
34 Repairing a frozen washing machine
34 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 35

35 Check these points if your washing machine...
36 Information codes

CYCLE CHART 37

37 Cycle chart

APPENDIX 38

38 Fabric care chart
38 Protecting the environment
38 Declaration of conformity
39 Specifications

WW70H5200EW-03409D_EN.indd 2 2014/7/30 17:32:06

safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.
Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
CAUTION	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WW70H5200EW-03409D_EN.indd 3 2014/7/30 17:32:07

safety information

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

WW70H5200EW-03409D_EN.indd 4 2014/7/30 17:32:07

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220-240V / 50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WW70H5200EW-03409D_EN.indd 5 2014/7/30 17:32:07

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, turn off the water & power supply immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may cause electric shock.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WW70H5200EW-03409D_EN.indd 6 2014/7/30 17:32:08

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance.

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WW70H5200EW-03409D_EN.indd 7 2014/7/30 17:32:08

CAUTION CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.
Open the Water Tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Take care that the rubber seal and the front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.)

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

WW70H5200EW-03409D_EN.indd 8 2014/7/30 17:32:08

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen Bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

WW70H5200EW-03409D_EN.indd 9 2014/7/30 17:32:08

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as Bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

⚠ WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use the strong acid cleaning agent.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WW70H5200EW-03409D_EN.indd 10 2014/7/30 17:32:08

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

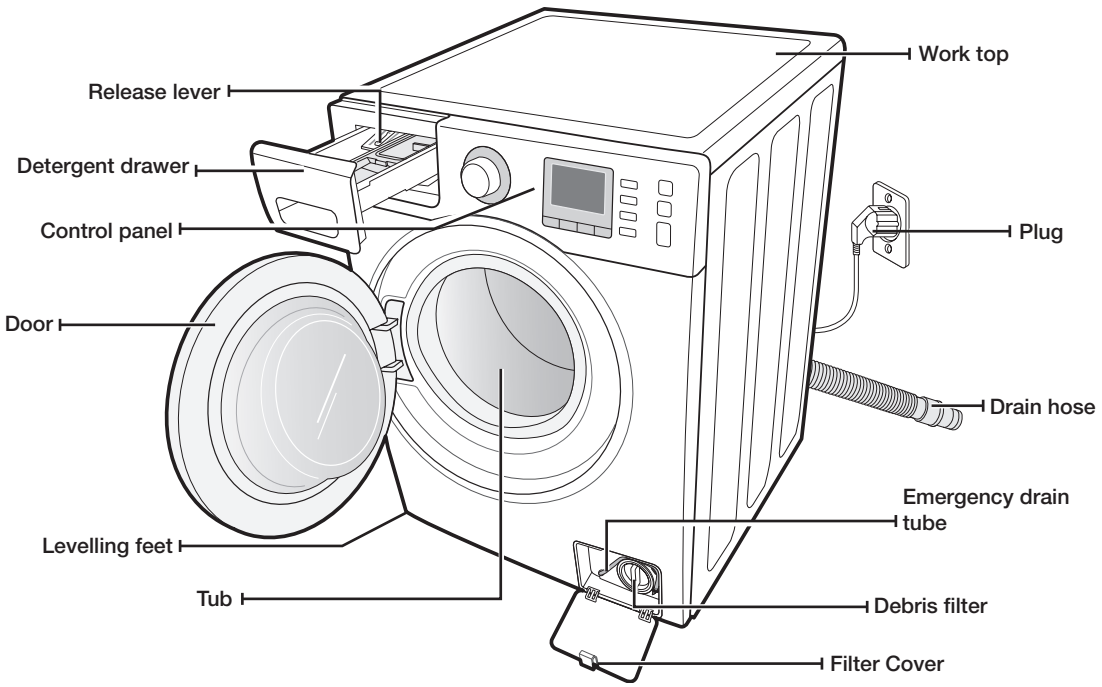

Spanner	Cap fixer	* Bolt hole covers	Water supply hose: Cold	Water supply hose: Hot (Selected model)	Hose guide	Liquid detergent box (Selected model)

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

WW70H5200EW-03409D_EN.indd 11 2014/7/30 17:32:09

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 220-240 V / 50 Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WW70H5200EW-03409D_EN.indd 12 2014/7/30 17:32:09

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 50 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WW70H5200EW-03409D_EN.indd 13 2014/7/30 17:32:09

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

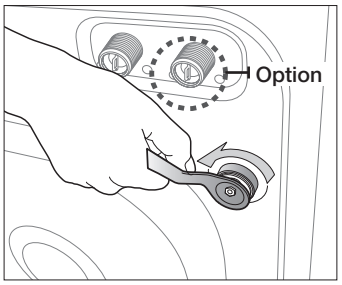

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

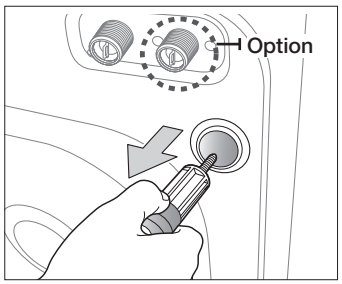

3. Fill the holes with the supplied plastic covers.

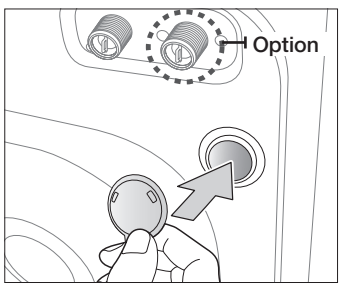

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WW70H5200EW-03409D_EN.indd 14 2014/7/30 17:32:10

STEP 3
Adjusting the Levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

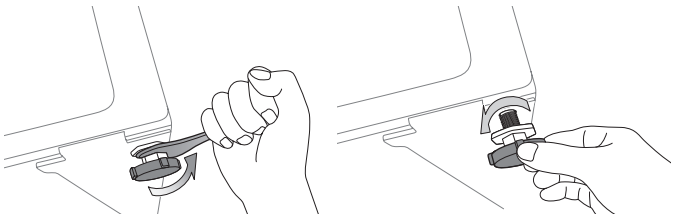

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

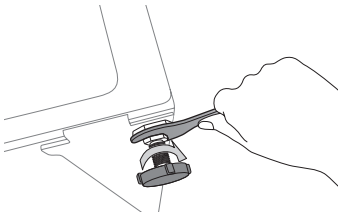

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

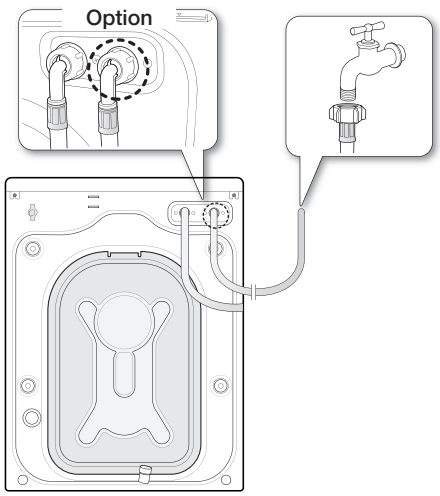

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WW70H5200EW-03409D_EN.indd 15 2014/7/30 17:32:10

setting up your washing machine

Connecting the water supply hose

1. Remove the adaptor from the water supply hose.

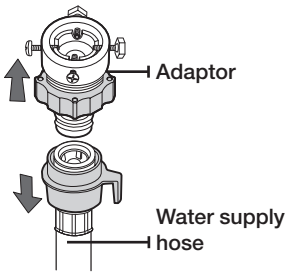

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

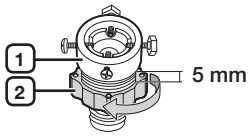

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

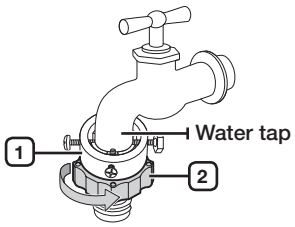

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

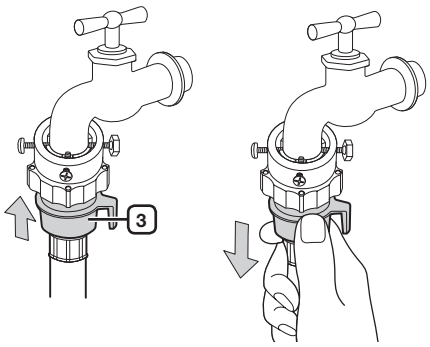

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

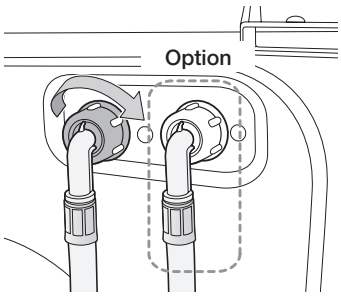

WW70H5200EW-03409D_EN.indd 16 2014/7/30 17:32:11

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

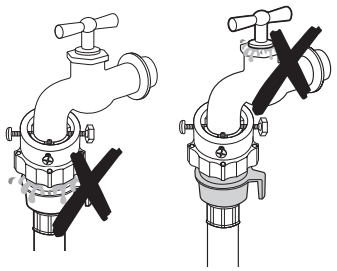

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

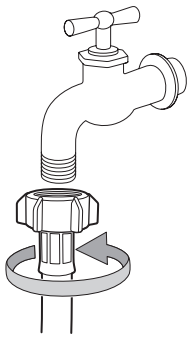

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

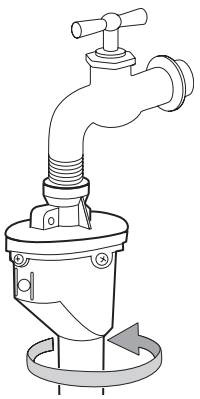

WW70H5200EW-03409D_EN.indd 17 2014/7/30 17:32:12

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.
2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

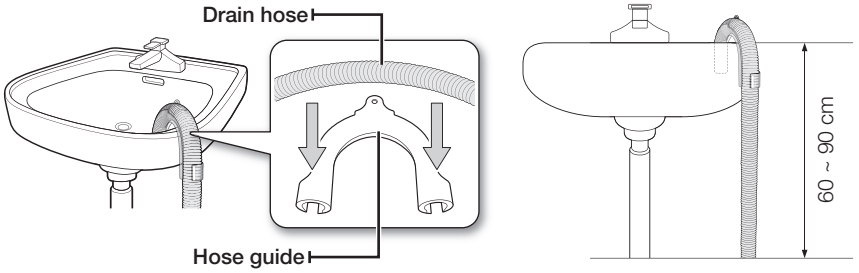

3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

The standpipe drain requires;
- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

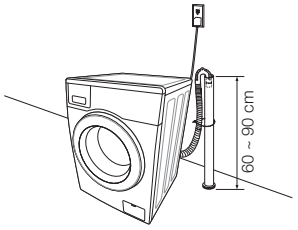

STEP 5
Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 12.)

Test run
Make sure that you install your washing machine correctly by running the **Rinse+Spin** cycle after the installation is complete.

STEP 6
Calibration mode

Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

1. Remove laundry or any contents in the machine and turn off the machine.
2. Press the **Power**(⏻) button and release it,and then press the **Temp** button and **Delay End** button simultaneously in addition. Then the machine turns on.(for WW70H5200E*)
3. Press the **Start/Pause(⏯)** button to activate “Calibration Mode”.
4. The drum rotates clockwise and counterclockwise approximately for 3 minutes.
5. When “Calibration Mode” is finished, “END(En)” appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

WW70H5200EW-03409D_EN.indd 18 2014/7/30 17:32:13

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power(⏻)** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause(⏯)** button.

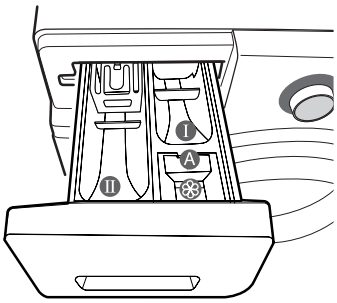

This will remove any water that might be left over in the machine from the manufacturer's test run.

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

To use liquid detergent, use the liquid detergent box (refer to page 29 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A").

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 27-28.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause(⏯)** button.

WW70H5200EW-03409D_EN.indd 19 2014/7/30 17:32:14

washing a load of laundry

USING THE CONTROL PANEL

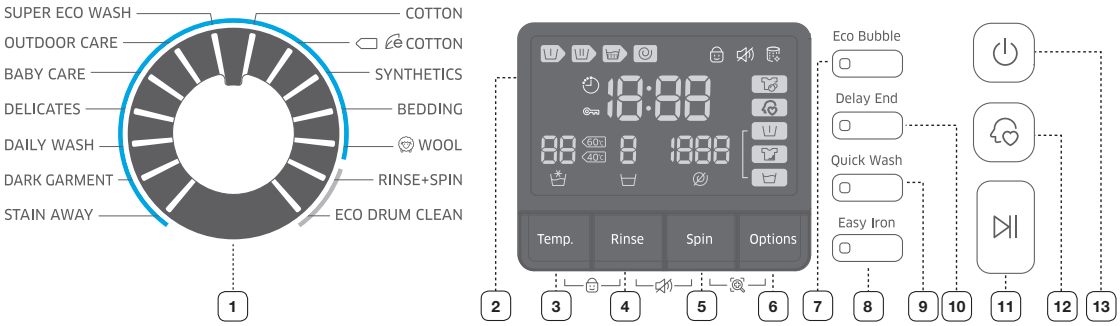

1 CYCLE SELECTOR

Select the tumble pattern and spin speed for the cycle.

For detailed information, refer to “Washing clothes using the cycle selector”. (see page 26)

COTTON - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

COTTON - Optimal performance with lower energy for cotton fabrics, bed linen, table linen, underwear, towels or shirts.

SYNTHETICS - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

BEDDING - For bed spread, bed sheet, Bedding cover etc.

Wash under 2.5 kg and only 1 kind of Bedding to achieve the best result.

WOOL - Only for machine-washable wool. A load should be less than 2.0 kg.

- The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem.
- Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.

RINSE + SPIN - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.

ECO DRUM CLEAN - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.

SUPER ECO WASH - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving.

OUTDOOR CARE - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber.

BABY CARE - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes.

DELICATES - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent.

DAILY WASH - Use for everyday items such as underwear and shirts.

WW70H5200EW-03409D_EN.indd 20 2014/7/30 17:32:14

	DARK GARMENT - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly. **STAIN AWAY** - Featuring the soaking cycle to effectively remove stains from the laundry. During the soaking cycle, the drum stops rotating. This is not a system failure.
2 **DIGITAL GRAPHIC DISPLAY**	Displays the remaining wash cycle time, all cycle information, and error messages.
3 **TEMP SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water: , 20 ˚C, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
4 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
5 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WW70H5200E* \ , , 400, 800, 1000, 1200 rpm "No spin " - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold \ " - The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
6 **OPTION SELECTION BUTTON**	Press this button repeatedly to cycle through the options: (Soak) → (Intensive) → \ / (Pre Wash) → (Soak) + (Intensive) → (Soak) + \ / (Pre Wash) → (Intensive) + \ / (Pre Wash) → (Soak) + (Intensive) + \ / (Pre Wash) → (off) "Prewash \ /": Press this button to select pre-wash. Pre-wash is only available with: COTTON, e COTTON, SYNTHETICS, BEDDING, SUPER ECO WASH, BABY CARE, DAILY WASH, DARK GARMENT, STAIN AWAY. "Soak ": Use this option to effectively remove stains from your laundry by soaking your laundry. • The Soak function is performed 13 minutes into the wash cycle. • The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. • The Soak function is only available for the following wash programs: COTTON, e COTTON, SYNTHETICS, BEDDING, SUPER ECO WASH, BABY CARE, DAILY WASH, STAIN AWAY. "Intensive ": Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
7 **ECO BUBBLE SELECTION BUTTON**	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 25 for more information).

WW70H5200EW-03409D_EN.indd 21 2014/7/30 17:32:16

washing a load of laundry

8 **EASY IRON SELECTION BUTTON**	Press this button to prepare your laundry so that it can be easily ironed by reducing the wrinkles during the spin cycle. • Easy Iron is only available for the following wash programs: COTTON, COTTON, SYNTHETICS, BEDDING, SUPER ECO WASH, BABY CARE, DAILY WASH, DARK GARMENT, STAIN AWAY. • When Easy Iron is selected, you can set the spin cycle speed up to 800 rpm. (If you select Easy Iron with a spin cycle speed set to higher than 800 rpm, the spinning speed is automatically changed to 800 rpm.)
9 **QUICK WASH SELECTION BUTTON**	For lightly soiled garments and less than 2 kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalaced load, fluctuation in the electricity supply and extra options selected. • Press this button repeatedly to choose cycle time: 15 min → 20 min → 30 min → 40 min → 50 min → 1 hr → Off WARNING Powdered/Liquid detergent should be under 20 g (for 2 kg load) or detergent may remain on the clothes.
10 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options.The hour displayed indicates the time when the wash cycle will be finished. You can set the time of Delay End in hourly units more than estimated time of current cycle. WW70H5200E* — from 1 hours to 19 hours in one hour increments
11 **START/PAUSE SELECTION BUTTON ( )**	Press to pause and restart a cycle.
12 **MY CYCLE SELECTION BUTTON ( )**	Choose your favorite cycle including temperature, spin, soil level, option, etc.
13 **POWER BUTTON ( )**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WW70H5200EW-03409D_EN.indd 22 2014/7/30 17:32:16

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

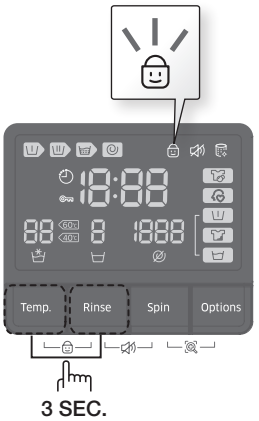

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power (⏻)** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

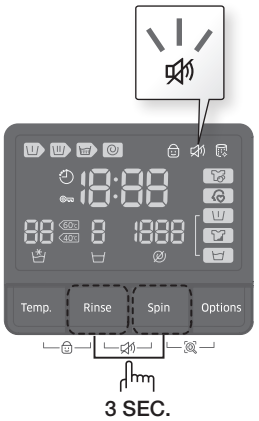

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Rinse** and **Spin** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

Delay end

You can set the washing machine to finish the current course at specific hours later.
This is useful if you want to finish the wash by the time you come home from business.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause(⏯)** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power(⏻)** button and then turn the washing machine on again.

Case study

You want to finish a two-hour course after 3 hours from now. For this, you add the Delay End option to the current course with the 3-hour setting, and press the Start/Pause button at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00 p.m. Provided below is the time line for this case.

2:00 pm	**3:00 pm**	**5:00 pm**
Set the Delay End to 3 hours.	Start	End

WW70H5200EW-03409D_EN.indd 23 2014/7/30 17:32:18

My cycle

Allows you to activate your custom wash (temperature, rinse, spin, etc.) with one button convenience.
By pushing the **My Cycle(↻)** button, press the My Cycle button to load and use the saved My Cycle options. The "My Cycle" light will indicate activation. Also, the chosen course and option lights will flicker.
You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
2. Press the **Power(⏻)** button.
3. Select cycle using the **Cycle Selector**.
4. After cycle selection, set each option.

See the "Cycle Chart" on page 37 for available option settings with each cycle.

5. You can then store the selected cycle and options by pressing and holding the **My Cycle(↻)** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.

You can change the My Cycle settings by repeating the same process above.
The last used setting will be displayed the next time you choose the My Cycle function.

If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

Smart Care

This function enables you to check the status of the washing machine using a smartphone.

1. Press and hold the **Spin** and **Options** button for 3 seconds to use the Smart Care function when an error occurs or if you do not press any buttons since you turn on the washer.
   - The error code history is deleted after using the function.
2. If the Smart Care function is activated, the LED on the window display rotates for 2 or 3 seconds and then the Smart Care indicator is lit on the display.
3. Run the Smart Care app on your smart phone.
   - The Smart Care function is optimized with Galaxy S, Galaxy S2, iPhone 4 and iPhone 4S.
4. Focus your smart phone's camera on the display panel of the washing machine.

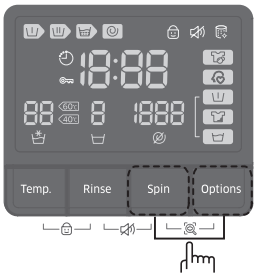

5. If the smart phone's camera is focused on the display panel of the washing machine, the panel and error message is automatically recognized and the error type and countermeasures are displayed on the smart phone.
6. If the smartphone fails to recognize the error code more than twice, please enter the error code displayed on the display panel of the washer manually into the Smart Care app.
   Downloading the Smart Care app.
   - Download the Samsung Laundry App into your mobile phone from the Android market or Apple App store. (Search word : Samsung Smart Washer) Precautions when using Smart Care.
   - If light from a light bulb, fluorescent bulb, or lamp is reflected on the display panel of the washing machine, the smartphone may not be able to recognize the panel or error mesage easily.
   - If you hold the smartphone at too large an angle relative to the front of the display panel, it may not be able to recognize the error code. For best results, hold the smartphone so that the front of the panel and the smartphone are parallel or nearly parallel.

WW70H5200EW-03409D_EN.indd 24 2014/7/30 17:32:18

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

The bubble function is available in all courses except for ECO DRUM CLEAN course and the function availability is as follows.

WW70H5200E*:

Course	Bubble function	Canceling the bubble function
COTTON, SYNTHETICS, BEDDING, DAILY WASH, DARK GARMNET	Available	Available
COTTON, WOOL, SUPER ECO WASH, OUTDOOR CARE, BABY CARE, DELICATES, STAIN AWAY		Not available
ECO DRUM CLEAN	Not available	-

- A different bubble function may be applied depending the course.

Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power(⏻)** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
   - Add the appropriate amount of detergent into the detergent compartment Ⅱ, and add the fabric softener to softener compartment ❀ just under the fiber softener base line (MAX) of “A”).
   - When the Prewash course is selected, add detergent into the prewash compartment Ⅰ as well.
   - To use liquid detergent, leave the liquid detergent box in the drawer(refer to “Liquid Detergent” section on page 29).

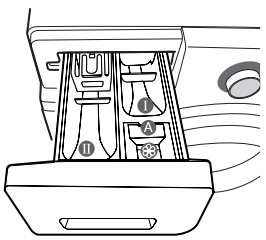

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
   - Press the **Start/Pause(⏯)** button to start the wash.
   - The amount of the laundry is automatically detected and the laundry is washed.
   - Once a washing machine operation begins, you cannot add or select the bubble function.

- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

WW70H5200EW-03409D_EN.indd 25 2014/7/30 17:32:18

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power(⏻)** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the COTTON, COTTON, SYNTHETICS, BEDDING, SUPER ECO WASH,BABY CARE, DAILY WASH, DARK GARMENT, STAIN AWAY cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: COTTON, COTTON, SYNTHETICS, BEDDING, WOOL, SUPER ECO WASH, OUTDOOR CARE, BABY CARE, DELICATES, DAILY WASH, DARK GARMENT, STAIN AWAY. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause(⏯)** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause(⏯)** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause(⏯)** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WW70H5200EW-03409D_EN.indd 26 2014/7/30 17:32:19

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power(⏻)** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp** button to select the temperature. (Cold water: 🖐 , 20 ˚C, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.(⊘ : No Spin; ⎓ :Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options. The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause(⏯)** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

WW70H5200EW-03409D_EN.indd 27 2014/7/30 17:32:19

washing a load of laundry

Determining the load capacity
Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WW70H5200E*
COTTON - average/lightly soiled - heavily soiled	7.0 kg
SYNTHETICS	3.0 kg
BEDDING	2.0 kg
WOOL	2.0 kg
OUTERDOOR CARE	2.0 kg
BABY CARE	3.0 kg
DELICATES	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Bedding cover, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Bedding cover, the recommended load capacity is 2.5 kg or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

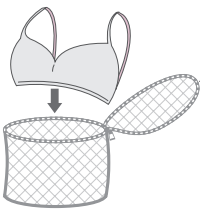

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

WW70H5200EW-03409D_EN.indd 28 2014/7/30 17:32:19

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.

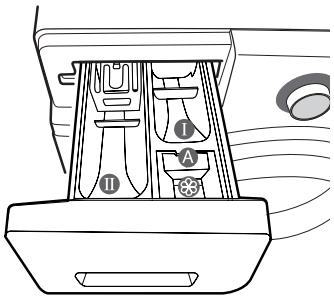

To use liquid detergent, use the liquid detergent box (refer to “Liquid Detergent” for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.

3. Add the recommended amount of fabric softener into the softener compartment ❀ if required. DO NOT exceed the MAX FILL (Ⓐ) line.

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (❀).

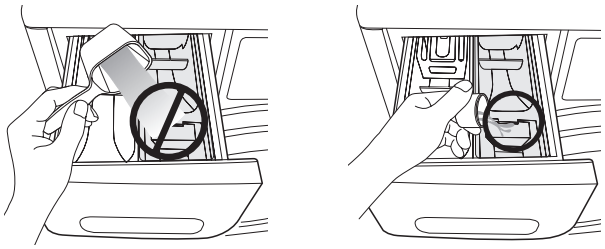

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⓘ.

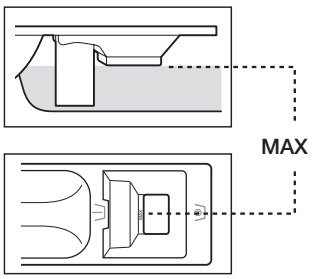

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

- DO NOT fill above the MAX line.
- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

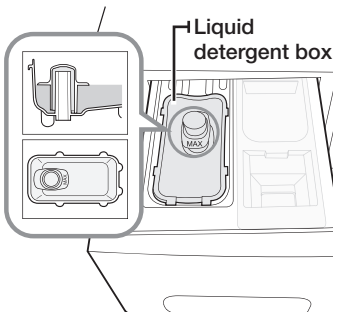

WW70H5200EW-03409D_EN.indd 29 2014/7/30 17:32:20

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.

1. Press the **Power(⏻)** button.
2. Turn the **Cycle Selector** to the ECO DRUM CLEAN course.
   - You can only use the Delay End function.
   - The water temperature during the ECO DRUM CLEAN is set to 70 ˚C.
   - It will auto set cotton 30 ˚C middle water level program when cloth is put in.

3. Place the appropriate amount of cleansing agent into the detergent compartment Ⅱ and close the detergent drawer (when cleaning the drum using a cleansing agent).
   - Be sure to use the recommended cleansing agent for cleaning the drum.
   - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

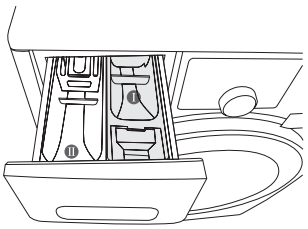

4. Press the **Start/Pause(⏯)** button.
   - If you press the **Start/Pause(⏯)** button, the ECO DRUM CLEAN course begins.

- Using the ECO DRUM CLEAN course, you can clean the drum without using a cleansing agent.
- Never use the ECO DRUM CLEAN course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.

CAUTION
- **In the ECO DRUM CLEAN course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].

WW70H5200EW-03409D_EN.indd 30 2014/7/30 17:32:21

The ECO DRUM CLEAN Auto Alarm Function

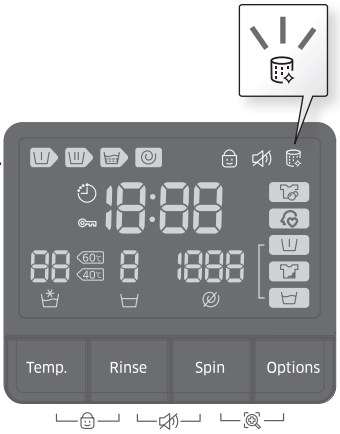

- If the “ECO DRUM CLEAN” indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO DRUM CLEAN course.
- If you do not perform the ECO DRUM CLEAN course, the “ECO DRUM CLEAN” indicator on the display and the lamp on the Cycle Selector are turned off. However, the “ECO DRUM CLEAN” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
- Although generally, the ECO DRUM CLEAN Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.

- **In case of the alarm, please also clean the debris filter (refer to “Cleaning the debris filter” section on page 32). Otherwise the performance of the bubble function may lower down.**

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover by pressing down and pulling its handle.

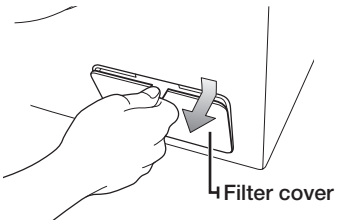

3. Open the emergency drain cap by pulling it.

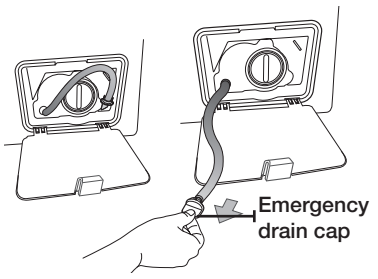

4. Hold the cap on the end of the emergency drain tube and slowly pull it out.
5. Allow all the water to flow into a bowl.

Remain water maybe more than you expected. Prepare larger bowl.

6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.

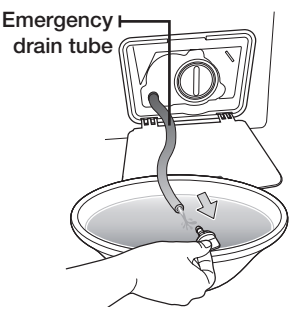

WW70H5200EW-03409D_EN.indd 31 2014/7/30 17:32:22

cleaning and maintaining your washing machine

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous section.)
If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.

CAUTION Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 31.)

   If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

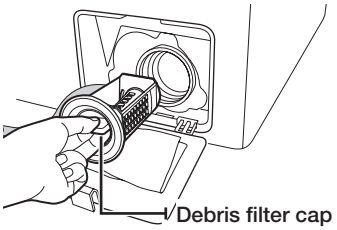

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

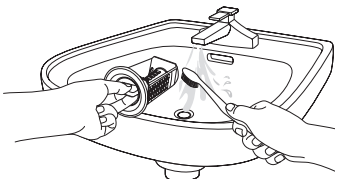

CAUTION Do not open the debris filter cap while the machine is running or hot water may flow out.

- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WW70H5200EW-03409D_EN.indd 32 2014/7/30 17:32:22

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

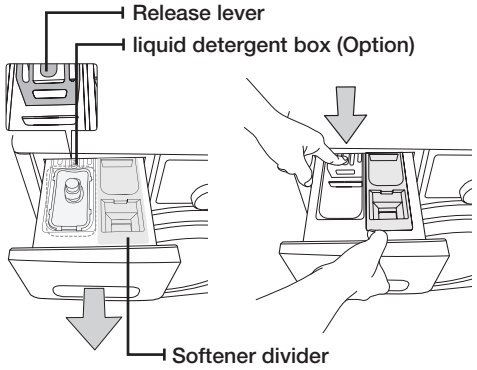

3. Wash all parts under running water.

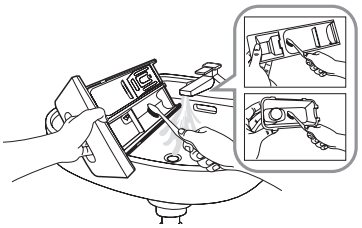

4. Clean the drawer recess with an old toothbrush.
5. Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

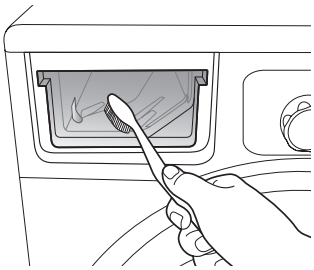

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

WW70H5200EW-03409D_EN.indd 33 2014/7/30 17:32:23

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the **COTTON** cycle and push the **Quick Wash** button and run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WW70H5200EW-03409D_EN.indd 34 2014/7/30 17:32:23

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WW70H5200EW-03409D_EN.indd 35 2014/7/30 17:32:23

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Sd/Sud	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WW70H5200EW-03409D_EN.indd 36 2014/7/30 17:32:24

cycle chart

CYCLE CHART

(● user option)

WW70H5200E*:

PROGRAM	Max load(kg)	DETERGENT			Max Temp (˚C)	Spin Speed(MAX) rpm
	WW70H5200E*	Pre-wash	wash	Softener		WW70H5200E*
COTTON	7.0	●	yes	●	95	1200
℮ COTTON	7.0	●	yes	●	60	1200
SYNTHETICS	3.0	●	yes	●	60	1200
BEDDING	2.0	●	yes	●	40	800
WOOL	2.0	-	yes	●	40	800
ECO DRUM CLEAN	-	-	yes	-	70	400
SUPER ECO WASH	3.0	●	yes	●	40	1200
OUTDOOR CARE	2.0	-	yes	●	40	1200
BABY CARE	3.0	●	yes	●	95	1200
DELICATES	2.0	-	yes	●	40	400
DAILY WASH	2.0	●	yes	●	60	1200
DARK GARMENT	3.0	●	yes	●	40	1200
STAIN AWAY	4.0	●	yes	●	60	1200

PROGRAM	Eco Bubble	Delay end	Easy Iron	Intensive	Soak	Quick Wash
COTTON	●	●	●	●	●	●
℮ COTTON	●	●	●	●	●	-
SYNTHETICS	●	●	●	●	●	-
BEDDING	●	●	●	●	●	-
WOOL	●	●	-	-	-	-
ECO DRUM CLEAN	-	●	-	-	-	-
SUPER ECO WASH	●	●	●	●	●	-
OUTDOOR CARE	●	●	-	-	-	-
BABY CARE	●	●	●	●	●	-
DELICATES	●	●	-	-	-	-
DAILY WASH	●	●	●	●	●	-
DARK GARMENT	●	●	●	●	-	-
STAIN AWAY	●	●	●	●	●	-

1. A cycle with a prewash takes approx. 19 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC60456/ EN60456.
   Please run Calibration Mode after the installation (see page 18).
3. ℮ Cotton 60 ºC + Intensive are programs according to EN60456.
4. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
5. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WW70H5200EW-03409D_EN.indd 37 2014/7/30 17:32:24

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
95 95	Item may be washed at 95 ˚C	A	Can be dry cleaned using any solvent
60 60	Item may be washed at 60 ˚C	P	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40 40	Item may be washed at 40 ˚C	F	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
Cl	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WW70H5200EW-03409D_EN.indd 38 2014/7/30 17:32:27

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WW70H5200E*	
			W600mm X D550mm X H850mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			42 ℓ	
NET WEIGHT			WW70H5200E*	
			61 kg	
WASH AND SPIN CAPACITY			7.0 kg	
POWER CONSUMPTION	MODEL		WW70H5200E*	
	WASHING		220 V	60 W
			240 V	60 W
	WASH AND HEATING		220 V	2000 W
			240 V	2400 W
	SPIN	MODEL	WW70H5200E*	
		230V	500 W	
	PUMPING		34 W	
SPIN REVOLUTIONS	MODEL		WW70H5200E*	
	rpm		1200	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WW70H5200EW-03409D_EN.indd 39 2014/7/30 17:32:27

memo

memo

memo

memo

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Code No. DC68-03409D_EN

WW70H5200E*

מכונת כביסה

מדריך למשתמש

Planet First 100% Recycled Paper

מדריך זה מודפס על-גבי 100% נייר ממוחזר.

דמיינו את האפשרויות

תודה על שרכשת מוצר זה מבית Samsung.

SAMSUNG

DC68-03409D

WW70H5200EW-03409D_HE.indd 1 2014/7/30 17:01:36

תוכן עניינים

התקנת מכונת הכביסה 11

11 תכולת האריזה
12 תאימות לדרישות ההתקנה
12 אספקת חשמל והארקה
12 אספקת מים
13 ניקוז
13 משטח ההתקנה
13 טמפרטורת הסביבה
13 התקנה בגומחה או ארון
13 התקנת מכונת הכביסה

כביסה 19

19 כביסה ראשונה
19 הוראות בסיסיות
20 השימוש בלוח הבקרה
23 נעילת ילדים
23 כיבוי צלילים
23 Delay End (השהיית סיום)
24 התוכנית שלי
24 מצב חכם\ טיפול חכם.
25 Eco Bubble
26 כביסה בעזרת בורר תוכניות הכביסה
27 הגדרות כביסה ידניות
27 הנחיות כביסה
28 מידע אודות אבקת/נוזל ותוספי כביסה
28 באיזה אבקת/נוזל כביסה להשתמש
29 מגירת חומרי הכביסה
29 נוזל כביסה (בדגמים נבחרים)

ניקוי ותחזוקת מכונת הכביסה 30

30 Eco Drum Clean(ניקוי תוף ידידותי לסביבה)
31 ניקוז מכונת הכביסה במקרה חירום
32 ניקוי מסנן הפסולת
32 ניקוי חלקה החיצוני של מכונת הכביסה
33 ניקוי גומחת ומגירת אבקת/נוזל הכביסה
33 ניקוי מסנן הרשת של צינור המים
34 תיקון מכונת כביסה שקפאה
34 אחסון מכונת הכביסה

קודי מידע ואיתור ופתרון תקלות 35

35 קרא בעיון את הסעיפים הבאים אם מכונת הכביסה שלך...
36 קודי מידע

טבלת תוכניות הכביסה 37

37 טבלת תוכניות הכביסה

נספח 38

38 טבלת טיפול בבדים
38 הגנת הסביבה
38 הצהרת תאימות
39 מפרט

WW70H5200EW-03409D_HE.indd 2 2014/7/30 17:01:36

מידע בטיחות

אנו מברכים אותך על רכישת מכונת הכביסה החדשה מבית Samsung. מדריך זה כולל מידע חשוב לגבי התקנת המכשיר, השימוש והטיפול בו. הקדש זמן לקריאת מדריך זה כדי לנצל בצורה הטובה ביותר את שפע התכונות והיתרונות של מכונת הכביסה שברשותך.

נושאי בטיחות שעליך להכיר

קרא מדריך זה ביסודיות כדי להבטיח שתדע כיצד להפעיל בבטחה וביעילות את הפונקציות והתכונות המקיפות של המכשיר החדש שרכשת, ושמור אותו במקום בטוח ליד המכשיר, לעיון בשעת הצורך. השתמש במכשיר זה רק למטרתו המיועדת בהתאם להוראות המפורטות במדריך זה.

התראות והנחיות בטיחות חשובות הכלולות במדריך זה אינן מכסות את כל התנאים והמצבים שעלולים להתרחש. באחריותך להפעיל שיקול דעת, זהירות ותשומת לב במהלך ההתקנה, התחזוקה והתפעול של מכונת הכביסה.

מאחר שהנחיות התפעול הבאות חלות על מספר דגמים, מאפייני מכונת הכביסה שלך עשויים להיות שונים במקצת מאלה המתוארים במדריך זה וייתכן שלא כל סימני האזהרה יהיו ישימים. אם יש לך שאלות או ספקות, פנה אל מרכז השירות הקרוב אליך או חפש סיוע ומידע באופן מקוון בכתובת www.samsung.com

סמלי אזהרה חשובים ואמצעי זהירות

משמעותם של הסמלים והסימנים המופיעים במדריך זה היא כדלקמן:

אזהרה	סכנות או אופני שימוש לא בטיחותיים שעלולים לגרום **פגיעה גופנית חמורה, מוות ו/או נזק לרכוש.**
זהירות	סכנות או אופני שימוש לא בטיחותיים שעלולים לגרום **פגיעה גופנית ו/או נזק לרכוש**.
זהירות	כדי להקטין את הסיכון לשריפה, פיצוץ, התחשמלות או פציעה בזמן השימוש במכונת הכביסה, יש להקפיד ולשמור על אמצעי הזהירות הבסיסיים הבאים:

	אין לנסות.
	אין לפרק.
	אין לגעת.
	פעל בדיוק בהתאם להוראות.
	נתק את תקע החשמל מהשקע בקיר.
	ודא כי המכונה מוארקת כדי למנוע התחשמלות.
	פנה למרכז השירות לקבלת סיוע.
	הערה

סימני אזהרה אלה נועדו למנוע פגיעה בך ובאחרים.

אנא הקפד לציית להם.

לאחר שתקרא פרק זה, שמור אותו במקום בטוח לעיון בשעת הצורך.

קרא את כל ההנחיות לפני השימוש במכשיר.

כמו בכל מכשיר הצורך חשמל ומכיל חלקים נעים, קיימות סכנות אפשריות. להפעלה בטוחה של המכשיר,עליך להכיר את אופן פעולתו ולנקוט אמצעי זהירות בעת השימוש בו.

WW70H5200EW-03409D_HE.indd 3 2014/7/30 17:01:37

מידע בטיחות

אזהרה: להפחתת סיכוני שריפה, התחשמלות או פציעה גופנית בעת השימוש במכשיר נא לשמור על כללי הזהירות בסיסיים המפורטים להלן:

אין לאפשר לילדים (או בעלי חיים) לשחק על, או בתוך מכונת הכביסה. דלת מכונת הכביסה אינה נפתחת בקלות מבפנים, וילדים עלולים להיפגע קשות אם שנלכדו בתוכה.

מכשיר זה אינו מיועד לשימוש על ידי אנשים (כולל ילדים) בעלי יכולות פיסיות, חישה או מנטאליות מופחתות, או כאלה שחסרים את הניסיון והידע המתאימים, אלא אם כן הם נמצאים תחת פיקוחו או קיבלו הוראות בנוגע לשימוש במכשיר מאדם שאחראי על בטיחותם.

יש להשגיח על ילדים ולוודא שהם אינם משחקים עם המכשיר.

לשימוש באירופה: מכשיר חשמלי זה ניתן לשימוש בידי ילדים מגיל 8 ואילך, בידי מבוגרים עם יכולות פיזיות ומנטליות מוגבלות וגם בקרב אנשים שהחושים שלהם נפגעו וכן בקרב אנשים חסרי ניסיון או ידע, כל עוד ניתנו להם הנחיות לשימוש במכשיר החשמלי בצורה בטוחה או שהם תחת השגחה בעת שימוש במכשיר החשמלי והם מבינים את הסכנות הכרוכות בכך. אין לאפשר לילדים לשחק במכשיר החשמלי. אין לאפשר ניקוי ותחזוקה של המכשיר החשמלי בידי ילדים ללא השגחת מבוגר.

אם כבל האספקה פגום, חובה להחליפו על ידי היצרן, איש שירות או אדם מוסמך אחר על מנת להימנע ממפגע.

יש למקם את מכונת הכביסה במקום ממנו יש נגישות לשקע החשמל, לברזי מים ולצינורות ניקוז.

במקרה שפתחי האוורור של המכשיר נמצאים בתחתיתו, יש לוודא שהם לא יחסמו על ידי שטיח.

יש להשתמש בסט הצינורות החדש המסופק עם המכשיר, ואין לעשות שימוש חוזר בסט הישן.

זהירות: על מנת להימנע ממפגעים עקב איפוס בשוגג של החתך התרמי, אין לבצע הוספה זו דרך מתג חיצוני, כמו טיימר,או חיבור למעגל חשמלי המופעל ומופסק בצורה קבועה.

WW70H5200EW-03409D_HE.indd 4 2014/7/30 17:01:38

אזהרות חשובות במיוחד לשלב ההתקנה

התקנת מוצר זה תתבצע רק על-ידי טכנאי מוסמך או חברת שירות.
- התקנה בניגוד להנחיה זו עלולה לגרום להתחשמלות, שריפה, פיצוץ, בעיות במוצר או פגיעה גופנית.

המכשיר כבד, היזהר כאשר אתה מרים אותו

חבר את כבל החשמל לשקע בקיר הפועל במתח של 240-220 וולט 50/AC הרץ ומעלה, והשתמש בשקע למכשיר זה בלבד. כמו כן, אל תשתמש בכבל מאריך.
- שימוש בשקע בקיר למספר מכשירים יחד באמצעות מפצל חשמל או על-ידי הארכת כבל החשמל עלול לגרום להתחשמלות או לשריפה.
- ודא כי מתח החשמל, התדר והזרם זהים לנתונים המצוינים במפרטי המוצר. אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה. חבר היטב את תקע החשמל לשקע בקיר.

הקפד להסיר בקביעות כל גוף זר כגון אבק או מים מהמגעים ומנקודות חיבור החשמל בעזרת מטלית יבשה.
- נתק את כבל החשמל ונקה אותו בעזרת מטלית יבשה.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

חבר את תקע החשמל לשקע בקיר בכיוון הנכון כך שהכבל ישתלשל כלפי הרצפה.
- אם תחבר את תקע החשמל לשקע בכיוון ההפוך, עלול להיגרם נזק לגידי החשמל בתוך הכבל והדבר עלול לגרום להתחשמלות או שריפה.

שמור את כל חומרי האריזה הרחק מהישג ידם של ילדים, מאחר שחומרים אלה עלולים לסכן אותם.
- אם ילד מניח שקית מעל ראשו, הדבר עלול לגרום לחנק.

אם נגרם נזק למכשיר, לתקע החשמל או לכבל החשמל, פנה למרכז השירות הקרוב.

על מכשיר זה להיות מוארק כהלכה.
אין להאריק את המכשיר לצינור גז, צינור מים מפלסטיק או קו טלפון.
- פעולה זו עלולה לגרום להתחשמלות, שריפה, פיצוץ או בעיות במוצר.
- לעולם אל תחבר את כבל החשמל לשקע שאינו מוארק כהלכה, כמו כן ודא כי ההארקה מבוצעת בהתאם לחוקי המדינה והתקנות המקומיות.

אל תתקין מכשיר זה בסמוך לגוף חימום או לחומר דליק.
אל תתקין מכשיר זה במיקום לח, שומני או מאובק, או במקום החשוף לאור שמש ישיר ולמים (גשם).

אל תתקין מכשיר זה במקום ששוררת בו טמפרטורה נמוכה.
- כפור עלול לגרום לצינורות להתפוצץ.

אל תתקין מכשיר זה במיקום שבו עלולה להתרחש דליפת גז.
- הדבר עלול לגרום להתחשמלות או לשריפה.

אל תשתמש בשנאי חשמלי.
- הדבר עלול לגרום להתחשמלות או לשריפה.

אל תשתמש בתקע חשמל פגום, בכבל חשמל פגום או בשקע רופף בקיר.
- הדבר עלול לגרום להתחשמלות או לשריפה.

אל תמשוך או תכופף יתר על המידה את כבל החשמל.
אל תעקם או תקשור את כבל החשמל.
אל תתלה את כבל החשמל על חפץ ממתכת, אל תניח עליו חפץ כבד, אל תכניס את כבל החשמל בין עצמים ואל תדחוף את כבל החשמל לרווח שמאחורי המכשיר.
- הדבר עלול לגרום להתחשמלות או לשריפה.

WW70H5200EW-03409D_HE.indd 5 2014/7/30 17:01:38

מידע בטיחות

אל תמשוך את כבל החשמל בעת ניתוק תקע החשמל מהקיר.
- נתק את תקע החשמל על-ידי אחיזה בתקע עצמו.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

אל תניח את כבל החשמל ואת הצינורות במקום שבו אתה עלול למעוד עליהם.

זהירות אמצעי זהירות לשלב ההתקנה

יש למקם את המכשיר כך שיהיה נגיש לתקע החשמל.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה עקב דליפת חשמל.

הצב את המכשיר על משטח ישר וקשיח שיכול לשאת את משקלו.
- אי ציות להנחיה זו עלול לגרום לרעידות חריגות, תזוזות, רעש, או בעיות במוצר.

אזהרה אזהרות חשובות במיוחד לשלב השימוש

אם מתרחשת הצפה במכשיר, נתק מייד את אספקת המים והחשמל ופנה אל מרכז השירות הקרוב.
- אל תיגע בתקע החשמל בידיים רטובות.
- אי ציות להנחיה זו עלול לגרום להתחשמלות.

אם בוקע מהמכשיר רעש מוזר, או אם עולה ממנו ריח של שריפה או עשן, נתק מייד את כבל החשמל ופנה אל מרכז השירות הקרוב.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

במקרה של דליפת גז (כגון גז פרופן, גז בישול, וכדומה), אוורר מייד את האזור מבלי לגעת בתקע החשמל. אל תיגע במכשיר או בכבל החשמל.
- אל תשתמש במאוורר חשמלי.
- ניצוץ חשמלי עלול לגרום לפיצוץ או לשריפה.

אל תניח לילדים לשחק על מכונת הכביסה או בתוכה. כמו כן, בעת השלכת המכשיר, הסר את ידית הדלת של מכונת הכביסה.
- אם ילד נלכד בתוך המכשיר, הוא עלול להיחנק למוות.

הקפד להסיר את חומרי האריזה (ספוג, קלקר) בבסיס המארז של מכונת הכביסה לפני השימוש בה.

WW70H5200EW-03409D_HE.indd 6 2014/7/30 17:01:38

אל תכבס פריטים שהתלכלכו בנפט, קרוסין, בנזן, מדלל צבע, אלכוהול או חומרים דליקים או נפיצים אחרים.
- הדבר עלול לגרום להתחשמלות, לשריפה או לפיצוץ.

אל תנסה לפתוח בכוח את דלת מכונת הכביסה כאשר היא פועלת (שטיפה/ייבוש/סחיטה בטמפרטורה גבוהה).
- מים שזורמים החוצה ממכונת הכביסה עלולים לגרום לכוויות או לרצפה חלקה.

הדבר עלול לגרום לפגיעה גופנית.
- פתיחת הדלת בכוח עלולה לגרום נזק למוצר או פגיעה גופנית.

אל תכניס את ידך מתחת למכונת הכביסה.
- הדבר עלול לגרום לפגיעה גופנית.

אל תיגע בתקע החשמל בידיים רטובות.
- הדבר עלול לגרום להתחשמלות.

אל תכבה את המכשיר על-ידי ניתוק תקע החשמל בזמן שהמכשיר פועל.
- החזרת התקע לשקע בקיר עלולה לגרום לניצוץ ובעקבותיו להתחשמלות או לשריפה.

אל תניח לילדים או לאנשים שבריאותם לקויה להשתמש במכונת הכביסה ללא פיקוח. אל תניח לילדים לטפס על המכשיר.
- אי ציות להנחיה זו עלול לגרום להתחשמלות, לשריפה או לפגיעה גופנית.

אל תכניס יד או חפץ מתכתי מתחת למכונת הכביסה כאשר היא פועלת.
- הדבר עלול לגרום לפגיעה גופנית.

אל תנתק את המכשיר על-ידי משיכת כבל החשמל. הקפד תמיד לאחוז היטב בתקע ולמשוך אותו ישירות מהשקע.
- נזק לכבל עלול לגרום לקצר חשמלי, לשריפה ו/או להתחשמלות.

אל תנסה לנקות, לפרק או לשנות את המכשיר בעצמך.
- אל תשתמש באף נתיך (כגון נחושת, תיל פלדה וכוי) מלבד הנתיך הסטנדרטי.
- לתיקון או התקנה מחדש של המכשיר, פנה אל מרכז השירות הקרוב.
- התקנה בניגוד להנחיה זו עלולה לגרום להתחשמלות, שריפה, בעיות במוצר או פגיעה גופנית.

אם החיבור של צינור אספקת המים לברז המים מתרופף ומים מציפים את המכשיר, נתק את תקע החשמל.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

נתק את תקע החשמל כאשר לא נעשה שימוש במכשיר למשך פרקי זמן ארוכים או במהלך סופת ברקים/רעמים.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

WW70H5200EW-03409D_HE.indd 7 2014/7/30 17:01:38

מידע בטיחות

אמצעי זהירות לשלב השימוש

זהירות

אם חודר למכונת הכביסה גוף זר כגון חומר ניקוי, לכלוך, שאריות מזון וכדומה, נתק את תקע החשמל ונקה את מכונת הכביסה באמצעות מטלית רכה ולחה.

- אי ציות להנחיה זו עלול לגרום לשינוי צבע, עיוות צורה, נזק או חלודה.

מכה חזקה עלולה לשבור את הזכוכית הקדמית. היזהר בעת השימוש במכונת הכביסה.

- זכוכית שנשברה עלולה לגרום לפגיעה גופנית.

לאחר כשל באספקת המים או בעת חיבור מחדש של צינור אספקת המים, פתח את ברז המים בזהירות. פתח את ברז המים בזהירות לאחר תקופה ארוכה שבה לא נעשה שימוש במכשיר.

- לחץ האוויר בצינור אספקת המים או בצינור המים עלול לגרום נזק לרכיבים או לנזילת מים.

אם מתרחשת שגיאת ניקוז במהלך ההפעלה, בדוק אם קיימת בעיה בניקוז.

- אם נעשה שימוש במכשיר כאשר יש בו הצפה עקב בעיית ניקוז, הדבר עלול לגרום להתחשמלות או לשריפה עקב דליפת חשמל.

הכנס את הכביסה לתוך המכונה כך שהכבסים לא ייתפסו בדלת.

- אם כבסים נתפסים בדלת, הדבר עלול לגרום נזק לכבסים או למכונת הכביסה, או לגרום לנזילת מים.

ודא שברז המים סגור כשלא נעשה שימוש במכונת הכביסה.

- ודא שהבורג על המחבר של צינור אספקת המים מוברג היטב.
- אי ציות להנחיה זו עלול לגרום לנזק למוצר או לפגיעה גופנית.

ודא שאטם הגומי וזגוגית הדלת הקדמית אינם מלוכלכים בחומרים זרים (כגון לכלוך, סיבי בד, שיער וכו').

- אם עצם זר נלכד בדלת או שהדלת אינה סגורה היטב, תיתכן דליפת מים.

לפני השימוש במוצר, פתח את ברז המים ובדוק שהמחבר של צינור אספקת המים מהודק היטב ושאין נזילת מים.

- אם הברגים או המחבר של צינור אספקת המים רופפים, הדבר עלול לגרום לנזילת מים.

המוצר שרכשת מיועד לשימוש ביתי בלבד.

שימוש למטרות עסקיות מוגדר כשימוש לא ראוי. במקרה זה, תפקע האחריות הרגילה שמספקת חברת סמסונג, וחברת סמסונג לא תישא באחריות לתקלות או לנזקים הנובעים משימוש לא ראוי כזה.

WW70H5200EW-03409D_HE.indd 8 2014/7/30 17:01:38

אל תעמוד על-גבי המכשיר ואל תניח חפצים (כגון כביסה, נרות דולקים, סיגריות דולקות, כלי שולחן,כימיקלים, חפצים מתכתיים וכוי) על-גבי המכשיר.
- פעולה זו עלולה לגרום להתחשמלות, לשריפה, לבעיות במוצר, או לפגיעה גופנית.

אל תרסס חומר נדיף כגון מדביר חרקים על פני שטח המכשיר.
- מלבד העובדה שהוא מזיק לבני אדם, הוא עלול לגרום גם להתחשמלות, לשריפה, או לבעיות במוצר.

אל תניח חפץ שיוצר שדה אלקטרומגנטי בקרבת מכונת הכביסה.
- הדבר עלול לגרום לפגיעה גופנית בשל פעולה לא תקינה.

מאחר שהמים המתנקזים במהלך מחזור כביסה או ייבוש בטמפרטורה גבוהה הם חמים, אין לגעת במים.
- הדבר עלול לגרום לכוויות או לפציעה.

אין לשטוף, לסחוט או לייבש מושבים, מרבדים או בגדים עמידים במים (*) אלא אם המכשיר כולל תוכנית מיוחדת לשטיפת פריטים מסוג זה.
- אין לכבס מרבדים עבים וקשים אפילו אם על תווית הוראות הכביסה מופיע סימן של כביסה במכונה.
- הדבר עלול לגרום לפגיעה גופנית או לנזק למכונת הכביסה, לקירות, לרצפה או לכבסים בשל רעידות חריגות.

* מצעים מצמר, כיסויי גשם, שכפייצים, מכנסי גלישה, שקי שינה, מגן פלסטיק לחיתולים, חליפות טריינינג וכיסויים לאופניים, אופנועים, כלי רכב וכוי.

אל תפעיל את מכונת הכביסה כאשר מגירת חומרי הכביסה אינה בתוכה.
- הדבר עלול לגרום להתחשמלות או לפגיעה גופנית בשל נזילת מים.

אל תיגע בדפנות הפנימיים של התוף במהלך הייבוש או מייד בסיומו, מאחר שהן חמות.
- הדבר עלול לגרום לכוויות.

אל תכניס את ידך למגירת חומרי הכביסה לאחר פתיחתה.
- הדבר עלול לגרום לפגיעה גופנית משום שידך עלולה להיתפס בהתקן ההזנה של חומרי הכביסה. אל תניח חפץ כלשהו מלבד כביסה (כגון נעליים, שאריות מזון, חיות) בתוך מכונת הכביסה.
- הדבר עלול לגרום לנזק למכונת הכביסה, או לפגיעה גופנית ולמוות במקרה של חיות מחמד עקב הרעידות החריגות.

אל תלחץ על הכפתורים באמצעות חפצים חדים כגון סיכות, סכינים, ציפורניים וכדומה.
- הדבר עלול לגרום להתחשמלות או לפגיעה גופנית.

אל תכבס כביסה המוכתמת בשמנים, קרמים או משחות שנמכרים בדרך כלל במכוני קוסמטיקה או עיסוי.
- הדבר עלול לגרום לעיוות של אטם הגומי ולנזילת מים.

אל תשאיר חפצים מתכתיים כגון סיכת ביטחון או סיכת ראש, או חומר מלבין בתוף המכונה למשך פרקי זמן ארוכים.
- הדבר עלול לגרום לתוף להחליד.
- אם סימני חלודה מתחילים להופיע על משטח התוף, שפוך עליו תכשיר ניקוי (נייטרלי) והשתמש בספוג לניקוי. לעולם אל תשתמש במברשת ברזל.

אין להשתמש ישירות בתכשיר לניקוי יבש ואין לכבס, לשטוף או לסחוט כביסה שעליה שאריות של תכשיר לניקוי יבש.
- הדבר עלול לגרום לבעירה ספונטנית או להתלקחות בשל החום הנפלט כתוצאה מתהליך החמצון של השמן.

אל תשתמש במים חמים מהתקנים לקירור/חימום מים.
- הדבר עלול לגרום לבעיות במכונת הכביסה.

WW70H5200EW-03409D_HE.indd 9 2014/7/30 17:01:38

מידע בטיחות

אל תשתמש בסבון טבעי לכביסה ביד במכונת הכביסה.
- אם הוא יתקשה ויצטבר בתוך מכונת הכביסה, הוא עלול לגרום לבעיות במוצר, לשינוי צבע, לחלודה או לריח רע.

אל תכבס פרטי כביסה גדולים כגון מצעים ברשת הכביסה.
- הכנס גרביים וחזיות לרשת הכביסה וכבס אותם עם שאר פרטי הכביסה.
- אי ציות להנחיה זו עלול לגרום לפגיעה גופנית בשל רעידות חריגות.

אל תשתמש בחומרי כביסה שמתקשים.
- אם הם יצטברו בתוך מכונת הכביסה, עלולה להתרחש נזילת מים.

במכונות כביסה עם פתחי אוורור בתחתית, יש לוודא כי הפתח אינו חסום על-ידי שטיח או מכשול אחר.

הקפד לרוקן את הכיסים בכל הבגדים המיועדים לכביסה.
- חפצים קשים וחדים כגון מטבעות, סיכות ביטחון, מסמרים, ברגים או אבנים עלולים לגרום למכשיר נזק משמעותי.

אל תכבס בגדים בעלי אבזמים וכפתורים גדולים, או אביזרי מתכת כבדים אחרים.

אזהרה אזהרות חשובות במיוחד לשלב הניקוי

אל תנקה את המכשיר על-ידי התזת מים ישירות עליו.
אל תשתמש בתכשיר הניקוי המבוסס על חומצה מרוכזת.
אל תשתמש בבנזן, כוהל או חומר מדלל לניקוי המכשיר.
- הדבר עלול לגרום לשינוי צבע, עיוות צורה, נזק, התחשמלות או שריפה.

לפני ניקוי או פעולת תחזוקה, נתק את המכשיר מהשקע בקיר.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

WW70H5200EW-03409D_HE.indd 10 2014/7/30 17:01:39

התקנת מכונת הכביסה

כדי להבטיח שמכונת הכביסה תפעל כשורה וכי לא קיימת סכנה לפגיעה גופנית בשעת השימוש, וודא כי המתקין עוקב אחר ההוראות שלהלן.

תכולת האריזה

הוצא בזהירות את מכונת הכביסה מאריזתה ווודא שכל החלקים שלהלן נמצאים. אם מכונת הכביסה ניזוקה במהלך התובלה, או אם חסרים חלקים כלשהם, צור קשר עם מרכז שירות הלקוחות של Samsung, או אם ספק Samsung ממנו נרכשה המכונה.

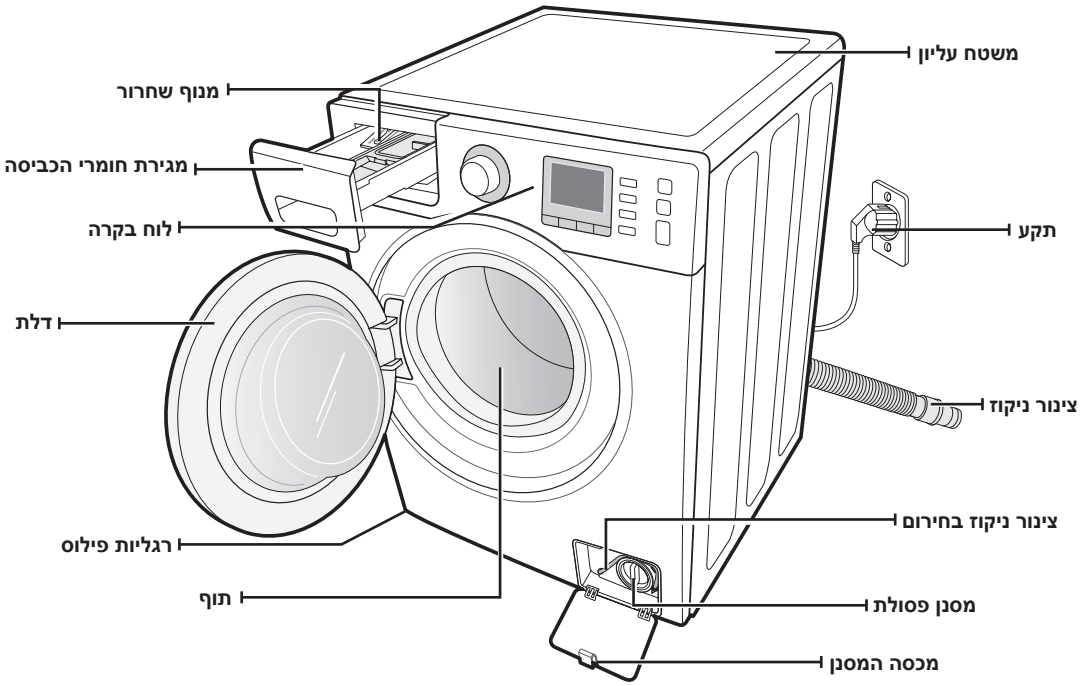

תיבת נוזל הכביסה (בדגמים נבחרים)	תושבת הצינור	צינור אספקת מים חמים (בדגמים נבחרים)	צינור אספקת מים קרים	*כיסויים לחורי הברגים	מפתח ברגים	מפתח ברגים
צינור אספקת מים						

*כיסויים לחורי הברגים : מספר המכסים לחורי הברגים משתנה בהתאם לדגם (5~3 מכסים)

WW70H5200EW-03409D_HE.indd 11 2014/7/30 17:01:40

התקנת מכונת הכביסה

תאימות לדרישות ההתקנה

אספקת חשמל והארקה

אזהרה: אין להשתמש בכבל מאריך.
יש להשתמש רק בכבל החשמל שסופק עם מכונת הכביסה.

לפני ההתקנה יש לוודא כי רשת החשמל שלך מספקת:

- נתיך או מפסק זרם 220V~240V 50Hz
- ענף חשמל בודד המספק חשמל אך ורק למכונת הכביסה שלך

יש לוודא כי מכונת הכביסה מאורקת כנדרש. במקרה של תקלה במכונת הכביסה, ההארקה מצמצמת את הסכנה לשריפה והתחשמלות על ידי כך שהיא מהווה את הנתיב בעל ההתנגדות הנמוכה ביותר לזרם החשמל.

מכונת הכביסה שלך מגיעה עם כבל חשמל בעל תקע מאורק עם שלוש שיניים אותו יש לחבר לשקע חשמל מאורק שהותקן כנדרש.

אין לחבר את ההארקה לצנרת פלסטיק, צינורות גז, או צינורות מים חמים.

חיבור לא תקין של המוליך להארקת הציוד עלול לגרום להתחשמלות.

אם אינך בטוח אם מכונת הכביסה מוארקת כהלכה, התייעץ עם חשמלאי או עם איש שירות מוסמך. אל תשנה את התקע המצורף למכונת הכביסה. אם הוא אינו תואם לשקע, בקש מחשמלאי מוסמך להתקין במקומו שקע מתאים.

אספקת מים

מכונת הכביסה מתמלאת כהלכה כאשר לחץ המים הוא 50kPa ~ 800kPa. לחץ מים קטן מ- 50kPa עלול לגרום לכך ששסתום המים לא ייסגר באופן הרמטי, ובכך עלול לגרום לכשל בפעולתו. לחילופין, יתכן שיידרש זמן רב יותר מהזמן אותו מתירות הבקרות למילוי המכונה, וכתוצאה מכך המכונה תכבה. (מגבלת הזמן למילוי המובנית בבקרות מכונת הכביסה, מיועדת למנוע מילוי יתר/הצפה במקרה שאחד מהצינורות הפנימיים משתחרר.)

על ברזי המים להימצא במרחק של 120 ס"מ מחלקה האחורי של מכונת הכביסה, כדי לאפשר את חיבורה לאספקת המים באמצעות הצינורות המסופקים.

רוב החנויות לציוד בניין ואינסטלציה מוכרות צינורות אספקת מים באורכים של עד 305 ס"מ.

ניתן לצמצם את הסיכון לדליפות ונזק ממים על ידי:

- נגישות קלה לברזי המים.
- סגירת ברזי המים כאשר מכונת הכביסה אינה בשימוש.
- בדיקה תקופתית לאיתור דליפות בנקודות החיבור של צינור המים.

אזהרה: לפני השימוש במכונת הכביסה בפעם הראשונה, בדוק את כל חיבורי שסתום המים והברזים לאיתור דליפות.

WW70H5200EW-03409D_HE.indd 12 2014/7/30 17:01:40

ניקוז

Samsung ממליצה על ברז בגובה של 65cm. על צינור הניקוז להיות מנותב דרך תפס צינור הניקוז, אל הצינור הזקוף. על הצינור הזקוף להיות גדול מספיק כדי להכיל את קוטרו החיצוני של צינור הניקוז. צינור הניזוק מגיע כשהוא מחובר.

משטח ההתקנה

לביצועים הטובים ביותר יש למקם את מכונת הכביסה על רצפה יציבה. יתכן שיהיה צורך לחזק רצפות עץ כדי למזער את הרעידות ו/או חוסר האיזון בנשיאת משקלה של מכונת הכביסה. שטיחים ואריחים רכים הם חלק מהגורמים התורמים לרעידות ולנטייה של מכונת הכביסה לזוז מעט בזמן הסחיטה.

אין להתקין את מכונת הכביסה על משטח מוגבה, או על משטח שאינו מעניק תמיכה מספקת

טמפרטורת הסביבה

אין להתקין את מכונת הכביסה באזורים בהם יתכן שהמים יקפאו. מכיוון שמכונת הכביסה מכילה תמיד כמות מסוימת של מים בשסתום המים, במשאבה ובצינורות, מים קפואים עלולים לגרום נזק לחגורה, משאבה ורכיבים נוספים.

התקנה בגומחה או ארון

לפעילות בטוחה ותקינה, יש צורך לשמור על המרווחים הבאים בין מכונת הכביסה והקירות שמסביבה:

מרווח צידי – 25 מ"מ	מרווח אחורי – 50 מ"מ
מרווח עליון – 25 מ"מ	מרווח קדמי – 465 מ"מ

כאשר מכונת ומייבש כביסה מותקנים ביחד, יש לוודא כי קיים פתח אוורור שגודלו 465 מ"מ לפחות, בפתח/דלת הגומחה או הארון . מכונת הכביסה לבדה אינה מצריכה פתח אוורור.

התקנת מכונת הכביסה

שלב 1

בחירת מיקום

לפני התקנתה של מכונת הכביסה וודא כי המיקום שבחרת:

- הינו משטח יציב ומישורי ללא שטיח או ריצוף שיחסמו את פתחי האוורור
- אינו חשוף לאור שמש ישיר
- מאפשר אוורור נאות
- הטמפרטורה אינה צונחת מתחת לנקודת הקיפאון (מתחת ל-0°C)
- מרוחק ממקורות חום כגון, נפט או גז
- מרווח מספיק כדי שמכונת הכביסה לא תעמוד על כבל החשמל שלה

WW70H5200EW-03409D_HE.indd 13 2014/7/30 17:01:40

התקנת מכונת הכביסה

שלב 2

הסרת בורגי התובלה

לפני התקנת מכונת הכביסה, עליך להסיר את כל בורגי ההובלה מגב היחידה.

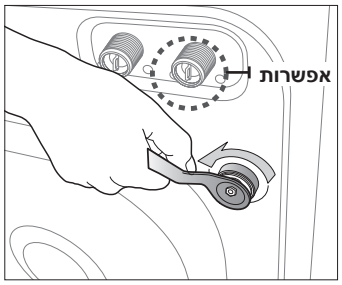

1. שחרר את כל הברגים בעזרת מפתח הברגים המסופק.

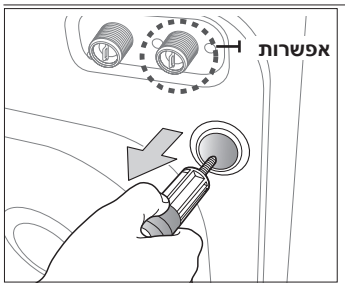

2. אחוז בבורג בעזרת מפתח הברגים ומשוך אותו דרך חלקו הרחב של החור. חזור על התהליך שלעיל עבור כל אחד מהברגים.

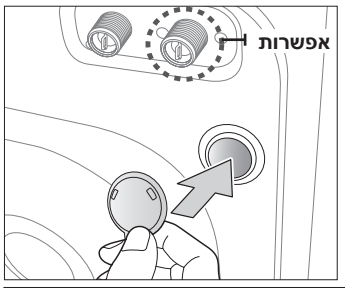

3. סתום את החורים בעזרת כיסויי החורים המסופקים.

4. אחסן את בורגי התובלה במקום בטוח למקרה שתרצה להוביל את מכונת הכביסה בעתיד

⚠ אזהרה חומרי האריזה עלולים להיות מסוכנים לילדים. יש לשמור את חלקי האריזה (שקיות פלסיק, קלקר וכו') הרחק מהישג ידם של ילדים.

WW70H5200EW-03409D_HE.indd 14 2014/7/30 17:01:40

שלב 3

התאמת גובה הרגל

במהלך התקנתה של מכונת הכביסה וודא כי תקע החשמל, ברזי אספקת המים ופתח הניקוז נגישים בקלות.

1. החלק את מכונת הכביסה למקומה.
2. אזן את מכונת הכביסה באמצעות סיבוב ידני של הרגל פנימה והחוצה עד להגעה לתוצאה הרצויה.

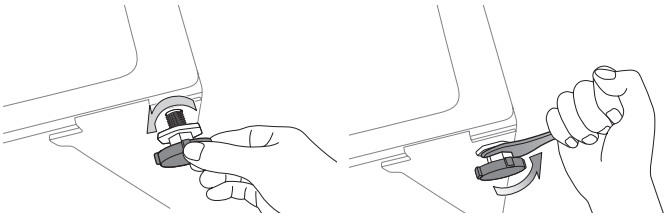

3. כאשר מכונת הכביסה מאוזנת, חזק את האומים באמצעות מפתח הברגים המצורף.

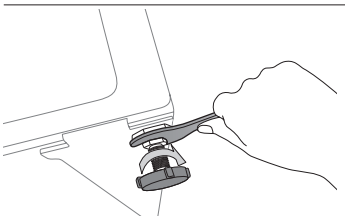

שלב 4

חיבור ברזי המים והניקוז

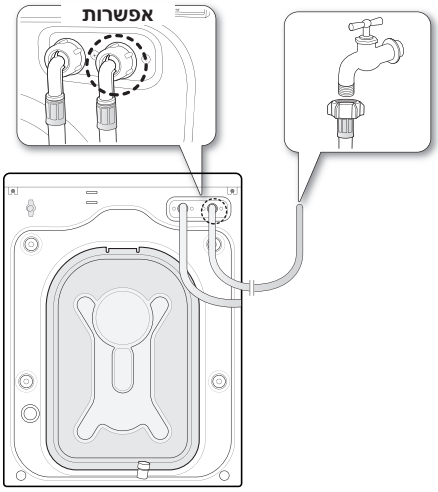

חיבור צינור אספקת המים

1. חבר את המתאם בצורת האות L של צינור אספקת המים הקרים אל חיבור כניסת המים הקרים בחלקה האחורי של מכונת הכביסה. הברג וחזק בעזרת היד

קצה אחד של צינור אספקת המים יש לחבר למכונת הכביסה, ואת קצהו השני יש לחבר לברז המים. אין למתוח את צינור אספקת המים. אם הצינור קצר מדי, החלף אותו בצינור לחץ גבוה ארוך יותר.

2. חבר את קצהו השני של צינור אספקת המים הקרים לברז המים הקרים שבכיור. הברג וחזק בעזרת היד. במידת הצורך, ניתן למקם מחדש את צינור אספקת המים בחלקה האחורי של מכונת הכביסה. כדי לעשות זאת שחרר את המתאם, סובב את הצינור וחזק את המתאם בחזרה.

עבור דגמים נבחרים עם פתח כניסת מים חמים:

1. חבר את המתאם בצורת האות L של צינור אספקת המים החמים אל חיבור כניסת המים החמים בחלקה האחורי של מכונת הכביסה. הברג וחזק בעזרת היד.
2. בר את קצהו השני של צינור אספקת המים החמים לברז המים החמים שבכיור. הברג וחזק בעזרת היד.
3. השתמש בחיבור בצורת האות Y אם ברצונך להשתמש רק במים קרים.

WW70H5200EW-03409D_HE.indd 15 2014/7/30 17:01:41

התקנת מכונת הכביסה

חיבור צינור אספקת המים

1. הסר את המתאם מצינור אספקת המים.

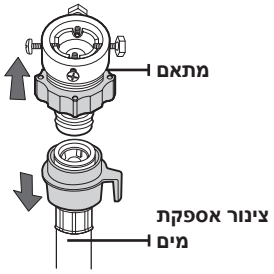

2. תחילה, באמצעות מברג מסוג '+', שחרר את ארבעת הברגים שעל המתאם. לאחר מכן קח את המתאם וסובב את הטבעת (2) עם כיוון החץ עד אשר נוצר מרווח של 5 מ"מ

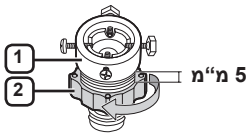

3. חבר את המתאם לברז המים על ידי הידוק הברגים בחוזקה תוך כדי הרמת המתאם כלפי מעלה.
סובב את הטבעת (2) עם כיוון החץ, וחבר את (1) ו-(2).

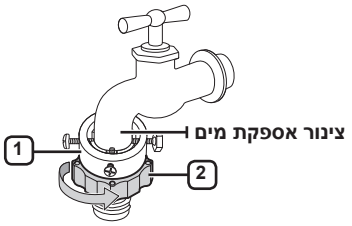

4. חבר את צינור אספקת המים אל המתאם. כאשר תשחרר את חלק (3) הצינור יתחבר אוטומאטית למתאם וישמיע צליל 'נקישה'.

לאחר חיבורו של צינור אספקת המים למתאם, וודא כי הצינור מחובר בצורה תקינה על ידי משיכתו כלפי מטה.

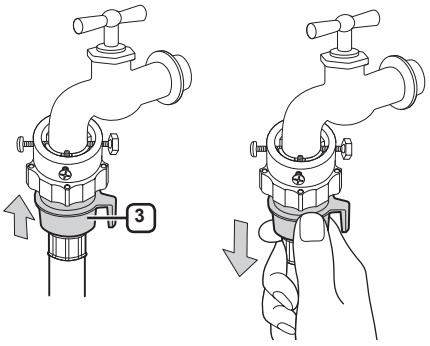

5. חבר את קצהו השני של צינור אספקת המים לשסתום כניסת המים בחלקה האחורי של מכונת הכביסה. הברג את הצינור כנגד כיוון השעון ובמלואו.

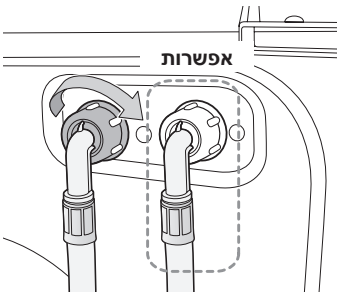

WW70H5200EW-03409D_HE.indd 16 2014/7/30 17:01:42

6. פתח את ברז אספקת המים וודא כי אין דליפות מים מהשסתום, הברז או המתאם. במקרה של דליפת מים, חזור שנית על השלבים שלעיל.

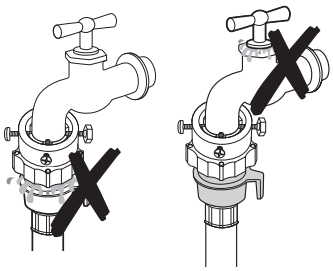

אזהרה: אין להפעיל את מכונת הכביסה במקרה של דליפת מים. תתכן סכנת התחשמלות או פציעה.

- אם קצהו של ברז המים מכיל הברגה, חבר את צינור אספקת המים אל הברז כפי שמוצג בתרשים.

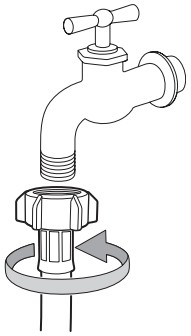

השתמש בברז מהסוג השגרתי ביותר. אם הברז מרובע או גדול מדי, הסר את טבעת הריווח לפני הכנסת הברז למתאם.

חיבור צינור ספיגת המים (בדגמים נבחרים)

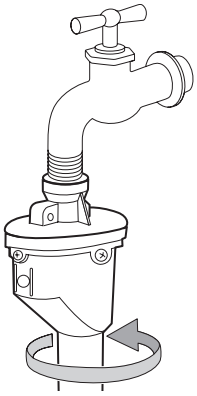

צינור ספיגת המים תוכנן להגנה מושלמת מפני נזילות.

הוא מחובר לצינור אספקת המים ומנתק באופן אוטומטי את זרם המים במקרה של נזק לצינור. כמו כן, הוא מציג חיווי אזהרה.

- חבר את צינור אספקת המים לברז כמוצג באיור.

WW70H5200EW-03409D_HE.indd 17 2014/7/30 17:01:42

התקנת מכונת הכביסה

חיבור צינור הניקוז

את קצהו של צינור הניקוז ניתן למקם בשלוש דרכים שונות:

1. **מעל דופן כיור רחצה:** יש להניח את צינור הניקוז בגובה של בין 60 ל-90 ס"מ.כדי לשמור על פיה מעוקלת של צינור הניקוז, השתמש במוביל הצינור מפלסטיק המצורף למכונה. חזק את המוביל אל הקיר בעזרת וו או אל הברז בעזרת פיסת חוט כדי למנוע תזוזה של צינור הניקוז.
2. **במסעף צינור הניקוז בכיור:** על מסעף צינור הניקוז להיות מעל סיפון הכיור, כך שקצה הצינור "מצא לפחות 60 ס"מ מעל הרצפה.

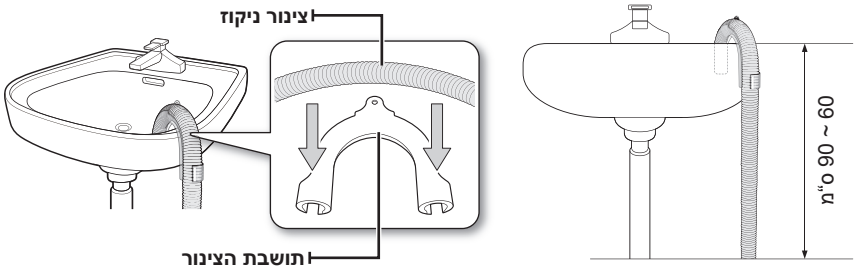

3. **בצינור ניקוז:** אנו ממליצים על שימוש בצינור אנכי בגובה 65 ס"מ; על אורך הצינור להיות בין 60 ל-90 ס"מ.

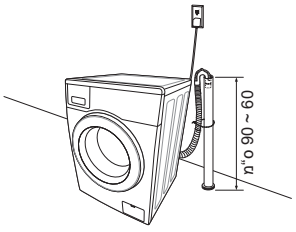

דרישות צינור הניקוז האנכי:
- קוטר מינימלי של 5 ס"מ.
- ספיקה מינימלית של 60 ליטרים לדקה.

שלב 5

הפעלת מכונת הכביסה

חבר את כבל החשמל לשקע חשמל מאושר של 220-240 וולט 50/AC הרץ בקיר, המוגן על-ידי נתיך או מפסק פחת. (לפרטים נוספים אודות דרישות החשמל וההארקה, פנה לעמוד 12.)

בדיקת הרצה

הקפד להתקין את מכונת הכביסה בצורה נאותה ולהפעיל את תוכנית **שטיפה+סחיטה** בסיום ההתקנה.

שלב 6

מצב כיול

מכונת הכביסה של Samsung מזהה את משקל הכביסה באופן אוטומטי. לזיהוי משקל מדויק יותר, הפעל את המצב כיול (Calibration) לאחר התקנת המכונה. פעל על-פי ההוראות הבאות כדי לכייל את המכונה.

1. הסר את הכביסה ואת כל הפריטים האחרים שבתוך המכונה וכבה אותה.
2. לחץ על **הפעלה/כיבוי**(⏻) ושחרר אותו, ולאחר מכן לחץ על .**Temp (טמפרטורה)** ועל **Delay End (השהיית סיום)** בו-זמנית. ואז המכונה תדלק.(עבור *WW70H5200E)
3. לחץ על הלחצן **התחלה/השהייה**(⏯) כדי להיכנס למצב כיול.
4. התוף יסתובב עם כיוון השעון וכנגד כיוון השעון במשך 3 דקות בקירוב.
5. בסיום, הכיתוב END(En) (סיום) יוצג על הצג והמכונה תכבה באופן אוטומטי. מכונת הכביסה מוכנה עכשיו לשימוש.

WW70H5200EW-03409D_HE.indd 18 2014/7/30 17:01:43

כביסה

החלק הקשה ביותר בשימוש במכונת הכביסה החדשה שלך מבית Samsung, הוא קבלת ההחלטה איזו מערימות כביסה לכבס קודם לכן.

כביסה ראשונה

לפני הכביסה הראשונה יש להפעיל תוכנית כביסה מלאה כשהמכונה ריקה.

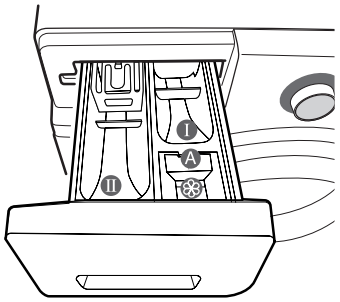

1. לחץ על הכפתור **הפעלה/כיבוי(⏻)** .
2. הוסף מעט אבקת/נוזל כביסה לתא אבקת/נוזל הכביסה Ⅱ שבמגירת אבקת/נוזל הכביסה.
3. פתח את ברז אספקת המים של מכונת הכביסה.
4. לחץ על הכפתור **התחלה/השהיה(⏯)**.

זאת לצורך ניקוז כל שאריות המים שייתכן ונשארו לאחר הרצת המבחן של היצרן.

תא Ⅰ: חומר כביסה לשטיפה מוקדמת, או עמילן.

תא Ⅱ: אבקת כביסה לשטיפה העיקרית, מרכך מים, חומר להשרייה מוקדמת, חומרי הלבנה והסרת כתמים.

לכביסה באמצעות נוזל כביסה, השתמש בתיבת נוזל הכביסה (עיין בעמוד 29 במדריך לאיתור הדגם המתאים). אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.

תא ❀: תוספים, כגון, מרכך כביסה (בשעת המילוי יש להקפיד לא לחרוג מהגובה המקסימאלי המסומן ב-MAX על התא "A")

הוראות בסיסיות

1. הכנס את הכביסה למכונת הכביסה.

אזהרה ⚠ אין לטעון כמות גדולה מדי של כביסה למכונת הכביסה. כדי לקבוע את קיבולת המכונה עבור כל אחד מסוגי הכביסה, פנה לטבלה שבעמוד 27 - 28.

- וודא כי הכבסים לא נתקעו בדלת המכונה. הדבר עלול גרום לדליפת מים.
- עם סיומה של תוכנית הכביסה יתכן שיוותרו שאריות של אבקת/נוזל כביסה בחלקה הקדמי העשוי גומי. יש להסיר את שאריות אבקת/נוזל הכביסה הללו מכיוון שהן עלולות לגרום לדליפת מים.
- אל תיגע בזכוכית הדלת הקדמית כאשר מכונת הכביסה פועלת, שכן היא עלולה להיות חמה.
- אל תפתח את מגירת חומרי הכביסה או את מסנן הפסולת כאשר מכונת הכביסה פועלת, שכן אתה עלול לבוא במגע עם מים חמים או קיטור.
- אל תכבס פריטים עמידים במים בתוכנית כביסה רגילה, רק בתוכנית Outdoor Care(בגדי טיול ועבודה).

2. סגור את הדלת עד שהיא ננעלת במקומה.
3. הפעל את המכונה.
4. הוסף אבקת כביסה ותוספים למגירה.
5. בחר את התוכנית והאפשרויות המתאימות לסוג הכביסה.
   מחוון הכביסה יאיר וזמן התוכנית המשוער יוצג על התצוגה.
6. לחץ על הכפתור **התחלה/השהיה(⏯)**.

WW70H5200EW-03409D_HE.indd 19 2014/7/30 17:01:44

כביסה

השימוש בלוח הבקרה

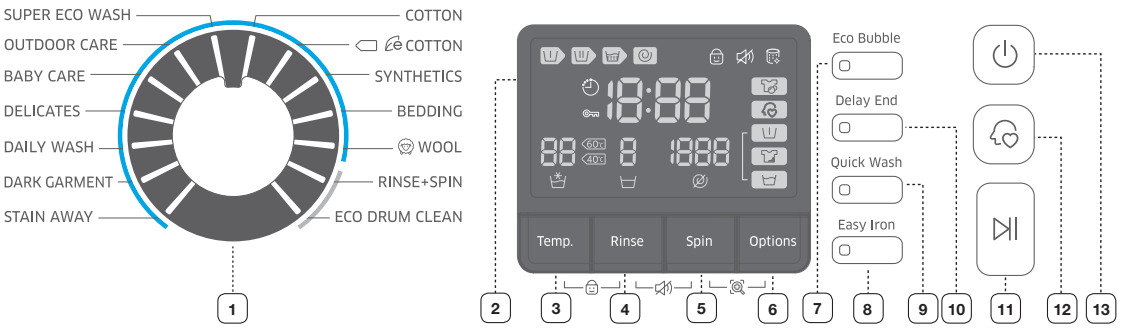

1 בורר תוכנית הכביסה

בחר את מאפייני הכביסה ומהירות הסחיטה.

לפרטים נוספים, פנה לפרק "שימוש בבורר תוכנית הכביסה" . (עמוד 26)

COTTON(כותנה) - לדרגת לכלוך נמוכה או בינונית של בדי כותנה, מצעים, מפות שולחן, ביגוד תחתון, מגבות, חולצות וכו'.

COTTON(כותנה) - ביצוע מיטבי עם חסכון באנרגיה לבדי כותנה, מצעים, מפות, לבנים, מגבות, או חולצות.

SYNTHETICS(סינתטי) - לדרגת לכלוך נמוכה או בינונית של חולצות ופריטים נוספים העשויים מפוליאסטר (דיאולן, טרווירה), פוליאמיד (פרלון, ניילון) או תרכובות דומות אחרות.

BEDDING(מצעים) - לכיסויי מיטה, סדינים, ציפות וכדומה.

כדי להשיג את התוצאות הטובות ביותר, אל תכבס יותר מ-2.5 ק"ג ו/או יותר מסוג אחד של מצעים.

WOOL(צמר) - רק עבור פריטי צמר הניתנים לכביסה במכונה. משקל הכבסים לא יעלה על 2 ק"ג.

- בתוכנית הצמר פעולת הכביסה מבוצעת באמצעות תנועות ערסול עדינות. במהלך השטיפה, תנועות הערסול וההשרייה העדינות נמשכות כדי להגן על סיבי הצמר מפני התכווצות / עיוות צורה ולניקוי עדין במיוחד. ניתן בקלות לעצור את הפעולה בתוכנית זו.
- בתוכנית הצמר מומלץ להשתמש באבקת כביסה עדינה, לתוצאות כביסה משופרות ולשמירה טובה יותר על סיבי הצמר.

RINSE + SPIN (שטיפה + סחיטה) - לפריטים הזקוקים לשטיפה בלבד, או כדי להוסיף מרכך כביסה בשטיפה.

ECO DRUM CLEAN (ניקוי תוף ידידותי לסביבה) - תוכנית לניקוי התוף. כוללת הסרת לכלוך וחיידקים מהתוף. מומלץ להשתמש בקביעות (לאחר כל 40 כביסות). אין צורך בחומר ניקוי או הלבנה.

SUPER ECO WASH(כביסה חסכונית במיוחד) - פונקציית Eco Bubble בטמפרטורה נמוכה מבטיחה כי תקבל תוצאות כביסה מושלמות תוך חיסכון ויעילות בצריכת אנרגיה.

OUTDOOR CARE(בגדי טיול ועבודה) - כביסה לביגוד שטח כגון בגדי טיפוס, חליפות סקי וביגוד ספורטיבי. מיועד לבדים עם גימור בטכנולוגיה פונקציונלית וסיבים סינטטיים כגון ספנדקס, סיבים נמתחים ומיקרופייבר.

BABY CARE(בגדי תינוקות) - טמפרטורת כביסה גבוהה ושטיפות נוספות מבטיחות שלא יישארו שאריות אבקת כביסה שיכתימו את הבגדים הדקים שלך.

DELICATES (עדינה) - לבדים דקים, חזיות, לבוש תחתון, שמלות וחולצות . לתוצאות הטובות ביותר מומלץ להשתמש בנוזל כביסה.

DAILY WASH(כביסה יומית) - כביסה לפריטים יומיומיים כגון לבנים וחולצות.

WW70H5200EW-03409D_HE.indd 20 2014/7/30 17:01:45

	DARK GARMENT(בגדים כהים) - שטיפות נוספות ומהירות סחיטה פחותה מבטיחות כי הבגדים הכהים האהובים עליך יעברו כביסה עדינה ושטיפה יסודית. **STAIN AWAY(הסרת כתמים)** - מספק מחזור השריה כדי להסיר כתמים בצורה אפקטיבית מהבגד. בעת מחזור ההשריה, התוף מפסיק להסתובב. זו היא אינה תקלה.
2 **תצוגה גראפית דיגיטאלית**	מציגה את הזמן שנותר עד לסיום תוכנית הכביסה, את כל המידע אודות תוכנית הכביסה והודעות שגיאה.
3 **.TEMP(טמפרטורה) כפתור בחירה**	לחץ על הכפתור לסירוגין כדי לעבור בין אפשרויות טמפרטורת המים הזמינות: (מים קרים: 20°C, 30°C, 40°C, 60°C ו-95°C)
4 **RINSE(שטיפה) כפתור בחירה**	לחץ על כפתור זה להוספת עוד מחזורי שטיפה. מספר מחזורי השטיפה המרבי הוא חמישה.
5 **SPIN(סחיטה) כפתור בחירה**	לחץ על הכפתור לסירוגין כדי לבחור את מהירות הסחיטה מבין האפשרויות הזמינות. WW70H5200E* __, ⊘, 400, 800, 1000, 1200 סל"ד "**ללא סחיטה**⊘" - הכביסה נשארת בתוף וללא תוכנית סחיטה לאחר הניקוז הסופי. **"עצור לאחר שטיפה**__**"** - הכביסה נשארת מושרית במי השטיפה. לפני שניתן להוציא את הכביסה מהמכונה צריך להתבצע Drain (ניקוז) או Spin (סחיטה).
6 **OPTION(אפשרויות כביסה) כפתור בחירה**	לחץ על כפתור זה לסירוגין כדי לעבור בין אפשרויות השטיפה: __ (השריה) ← __ (שטיפה מוגברת) ← /!\ (קדם שטיפה) ← __ (השריה) + __ (שטיפה מוגברת) ← __ (השריה) + /!\ (קדם שטיפה) ← __ (שטיפה מוגברת) + /!\ (קדם שטיפה) ← __ (השריה) + __ (שטיפה מוגברת) + /!\ (קדם שטיפה) ← (כיבוי) "**קדם שטיפה** /!\": לחץ על כפתור זה כדי לבחור בשטיפה מוקדמת. שטיפה מוקדמת זמינה רק בתוכניות: COTTON(כותנה), COTTON(כותנה), SYNTHETICS(סינתטי), BEDDING(מצעים), SUPER ECO WASH(כביסה חסכונית במיוחד), BABY CARE(בגדי תינוקות), DAILY WASH(כביסה רגילה), DARK GARMENT(בגדים כהים), STAIN AWAY (הסרת כתמים). "**השריה** __": השתמש באפשרות זאת כדי להסיר ביעילות כתמים באמצעות השרייתה של הכביסה. • ההשריה מתבצעת 13 דקות לאחר תחילתה של תוכנית הכביסה. • ההשריה אורכת 30 דקות, בשישה מחזורים. כל מחזור מורכב מסחיטה במשך דקה אחת והשריה במשך 4 דקות. • פונקצית ההשריה זמינה רק עם תוכניות הכביסה: COTTON(כותנה), COTTON(כותנה), SYNTHETICS(סינתטי), BEDDING(מצעים), SUPER ECO WASH(כביסה חסכונית במיוחד), BABY CARE(בגדי תינוקות), DAILY WASH(כביסה רגילה), STAIN AWAY (הסרת כתמים). "**שטיפה מוגברת** __": ויש לכבסה בצורה נמרצת. אורכה של כל אחת מתוכניות הכביסה מתארך בהתאם.
7 **ECO BUBBLE כפתור בחירה**	הבחירה ב-Eco Bubble מופעלת כברירת מחדל. לחץ על כפתור האפשרות Eco Bubble פעם אחת כדי לבטל את הבחירה ולכבות את יוצר הבועות (מוצג על-גבי הלוח), לחץ עליו שוב כדי לחזור ולהפעיל את הפונקציה. • בחלק מתוכניות הכביסה חובה להפעיל את האפשרות Eco Bubble (הדבר יוצג על-גבי הלוח ויוצר הבועות יופעל באופן אוטומטי). • תוכניות כביסה אחרות אינן זקוקות לאפשרות זו ומכבות את יוצר הבועות באופן אוטומטי. • בתוכניות רבות, ניתן לכוונן אפשרות זו באופן ידני, דבר שישפיע בצורה ברורה על משך הזמן הנותר לסיום מחזור הכביסה המוצג על-גבי הלוח(ראה עמוד 25 לקבלת מידע נוסף).

WW70H5200EW-03409D_HE.indd 21 2014/7/30 17:01:46

כביסה

8 **EASY IRON (גיהוץ קל) כפתור בחירה**	לחץ על כפתור זה כדי להפחית את היווצרות הקמטים בזמן הסחיטה לצורך גיהוץ קל. • Easy Iron (גיהוץ קל) זמינה רק עם תוכניות הכביסה הבאות: COTTON(כותנה), COTTON e(כותנה), SYNTHETICS(סינתטי), BEDDING(מצעים), SUPER ECO WASH(כביסה חסכונית במיוחד), BABY CARE(בגדי תינוקות), DAILY WASH(כביסה רגילה), DARK GARMENT(בגדים כהים), STAIN AWAY (הסרת כתמים). • כאשר נבחרת האפשרות "גיהוץ קל", תוכל לקבוע את מהירות הסחיטה עד לערך של 800 סל"ד. (אם תבחר באפשרות Easy Iron (גיהוץ קל) עם מהירות סחיטה גבוהה מ-800 סל"ד, מהירות הסחיטה תשתנה אוטומאטית ל-800 סל"ד.)
9 **QUICK WASH(כביסה מהירה) כפתור בחירה**	לבגדים בדרגת לכלוך קלה, במשקל של עד 2 ק"ג, הדרושים לך במהירות. התוכנית נמשכת כ-15 דקות לכל הפחות, אך פרק זמן זה עשוי להשתנות מהערך שצוין בהתאם ללחץ המים, רמת הקושי של המים, הטמפרטורה של פתח כניסת המים, טמפרטורת החדר, סוג וכמות הכביסה ודרגת הלכלוך, סוג אבקת הכביסה, משקל לא מאוזן של הכביסה במכונה, תנודות באספקת החשמל ואפשרויות נוספות שנבחרות. • לחץ על כפתור זה מספר פעמים כדי לבחור את משך המחזור: 15 דק' ← 20 דק' ← 30 דק' ← 40 דק' ← 50 דק' ← 1 שעה ← כיבוי אזהרה כדי להבטיח סילוק של כל שאריות חומרי הכביסה מהבגדים, אין להוסיף יותר מ-20 גר' אבקה או נוזל כביסה (למשקל כביסה של 2 ק"ג).
10 **DELAY END(השהיית סיום) כפתור בחירה**	לחץ על הכפתור לסירוגין כדי לעבור בין אפשרויות Delay End(השהיית סיום) הזמינות .השעה המוצגת מציינת את הזמן בו תסתיים תוכנית הכביסה. באפשרותך לקבוע את הזמן של השהיית הסיום ביחידות שעתיות יותר מהמוערך על ידי המסלול הנוכחי. *WW70H5200E: מ-1 עד 19 שעות במדרגות של שעה
11 **התחלה/השהייה כפתור בחירה (⏯)**	לחץ כדי להשהות, ולחזור ולהפעיל את התוכנית.
12 **התוכנית שלי כפתור בחירה (⟲)**	בחר את התוכנית המועדפת עליך כולל טמפרטורה, מהירות סחיטה, דרגת לכלוך, אפשרויות ועוד.
13 **כפתור הפעלה/כיבוי (⏻)**	לחץ על הכפתור פעם אחת כדי להפעיל את מכונת הכביסה ופעם נוספת כדי לכבותה. אם הפעלת את מכונת הכביסה ולא לחצת על אף אחד מכפתוריה, היא תכבה אוטומאטית לאחר 10 דקות.

WW70H5200EW-03409D_HE.indd 22 2014/7/30 17:01:47

נעילת ילדים

אפשרות Child Lock (נעילת ילדים) מאפשרת לנעול את כפתורי המכונה כך שלא ניתן לשנות את תוכנית הכביסה שבחרת.

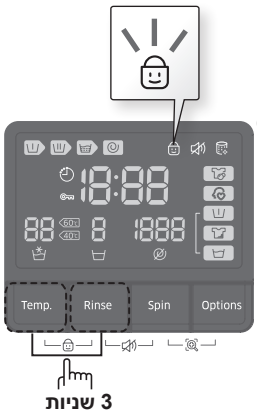

הפעלה/נטרול

אם ברצונך להפעיל את אפשרות "נעילת הילדים" לחץ במקביל על הכפתורים **Temp (טמפרטורה)** ו- **Rinse (שטיפה)** למשך 3 שניות. המחוון " **Child Lock (נעילת ילדים)**" יאיר כאשר אפשרות זו הופעלה.

לאחר שהופעלה Child Lock (נעילת הילדים) ניתן להשתמש רק בכפתור**הפעלה/כיבוי(⏻)**. Child Lock (נעילת הילדים) נשארת פעילה אפילו לאחר שמכונת הכביסה הופעלה וכובתה, וכבל החשמל נותק וחובר מחדש.

כיבוי צלילים

ניתן לבחור בפונקציה 'כיבוי צלילים' בכל התוכניות. כאשר פונקציה זו נבחרת, הקול נכבה עבור כל התוכניות. גם לאחר שמכבים ומפעילים את המכונה מספר פעמים, הגדרה זו נשמרת.

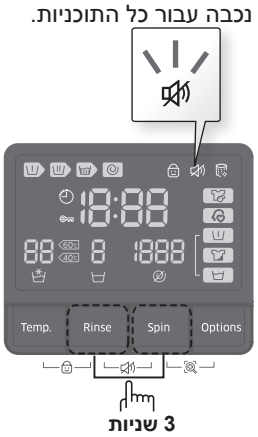

הפעלה/נטרול

אם ברצונך להפעיל או להשבית את הפונקציה 'כיבוי צלילים', לחץ על הכפתורים **Rinse (שטיפה)** ו- **Spin(סחיטה)** בו-זמנית במשך 3 שניות. המחוון **"כיבוי צלילים**"יאיר כאשר אפשרות זו הופעלה.

Delay End (השהיית סיום)

ניתן לכוון את מכונת הכביסה כך שתסיים את המסלול הנוכחי בשעה ספציפית מאוחר יותר.

שימושי אם ברצונך לסיים את השטיפה בזמן שחזרת הביתה מעיסוקיך.

1. הגדר את מכונת הכביסה ידנית או אוטומאטית בהתאם לסוג הכביסה.
2. לחץ על הכפתור **Delay End (השהיית סיום)** לסירוגין עד שתגיע לזמן הרצוי.
3. לחץ על הכפתור **התחלה/השהייה (⏯)**. המחוון **"Delay End (השהיית סיום)** 🕘" יאיר והשעון יתחיל לספור לאחר עד שיגיע לזמן שהוגדר.
4. כדי לבטל את אפשרות Delay End (השהיית הסיום)לחץ על הכפתור **הפעלה/כיבוי(⏻)** ולאחר מכן הפעל מחדש את מכונת הכביסה.

מקרה בוחן

ברצונך לסיים מסלול של שעתיים לאחר שלוש שעות מעכשיו. לזה, נוסיף את אפשרות השהיית סיום למסלול הנוכחי עם הגדרת שלוש שעות, ונלחץ על לחצן התחלה\עצור בשעה 14:00. לאחר מכן מה יקרה? מכונת הכביסה תחל לפעול בשעה 15:00, ותסיים בשעה 17:00. מטה יפורט ציר הזמן למקרה זה.

WW70H5200EW-03409D_HE.indd 23 2014/7/30 17:01:48

כביסה

התוכנית שלי

מאפשר לך להפעיל שטיפה בהתאמה אישית (טמפ', שטיפה, סחיטה, וכו'.) בכפתור אחד.

לחיצה על כפתור **התוכנית שלי(⟲)** , טוענת את האפשרויות של כפתור התוכנית שלי ומשתמשת באפשרויות השמורות של התוכנית שלי. הנורית " **התוכנית שלי**" תציין כי האפשרות מופעלת. בנו0ף, יהבהבו המריות של התוכנית והאפשרויות שנבחרו.

במצב התוכנית שלי ניתן להגדיר את כל האפשרויות הבאות.

1. פתח את ברז אספקת המים.
2. לחץ על הכפתור **הפעלה/כיבוי(⏻)** .
3. לבחור תוכנית באמצעות **בורר התוכניות**.
4. לאחר בחירת התוכנית, להגדיר כל אפשרות.

ראה את "טבלת התוכניות" בעמי 37 להגדרות האפשרויות הזמינות בכל תוכנית.

5. לאחר מכן ניתן לשמור בזיכרון את התוכנית והאפשרויות שנבחרו על-ידי לחיצה ממושכת על כפתור **My Cycle(⟲)** במשך יותר מ-3 שניות במצב התוכנית שלי. התוכנית התוכנית שלי והאפשרויות שתבחר יוצגו בפעם הבאה שתבחר בפונקציית התוכנית שלי.

ניתן לשנות את הגדרות התוכנית שלי על־ידי חזרה על התהליך שתואר לעיל.
ההגדרה האחרונה שנקבעה תוצג בפעם הבאה שתבחר בפונקציית התוכנית שלי.

אם תלחץ על כפתור התוכנית שלי ותרפה בתוך 3 שניות, יופיעו התוכנית והאפשרויות שנשמרו לאחרונה.
אם תלחץ ממושכות על התוכנית שלי במשך למעלה מ־3 שניות,התוכנית והאפשרויות המוגדרות כעת יישמרו והנורית תהבהב במשך 3 שניות.

Smar Care

תכונה זו מאפשרת לבדוק את מצב מכונת הכביסה באמצעות סמארטפון.

1. לחץ והחזק את כפתור סחיטה ואפשרויות למשך 3 שניות כדי להשתמש בפונקצית הטיפול חכם, כאשר קיימת שגיאה או אם אינך לחצת על כפתורים כלשהם מאז הדלקת המכונה.
   - היסטוריית קוד השגיאה נמחקת אחרי שימוש בפונקציה.
2. אם פונקצית טיפול חכם מופעלת, אורות הלד במסך התצוגה סובבים למשך 2 – 3 שניות ולאחר מכן אינדיקטור הטיפול החכם יופיע דלוק על המסך.
3. הפעל את אפליקציית טיפול חכם בטלפון החכם שלך.
   - פונקציית טיפול חכם מותאמת ל – Iphone 4, Galaxy S2, Galaxy S ו Iphone 4S.
4. מקד את מצלמת הסמארטפון על לוח התצוגה של מכונת הכביסה.
5. לאחר שמצלמת הסמארטפון תתמקד על לוח התצוגה של מכונת הכביסה, הודעת השגיאה וסוג השגיאה תוכרנה מידית, ואמצעי התיקון המומלצים יוצגו על מסך הסמארטפון.
6. אם הסמארטפון נכשל בזיהוי קוד השגיאה יותר מפעמיים, נא להזין את קוד השגיאה המוצג על גבי לוח התצוגה של מכונת הכביסה ידנית לתוך אפליקציית ה-SmartCare. ורדת האפליקציה Smart Care.
   - הורד את אפליקציית הכביסה של Samsung לטלפונך הנייד מחנויות מקוונות Android market או Apple App store. (מילת חיפוש: Samsung Smart Washer) אמצעי זהירות בעת השימוש ב-Smart Care.
   - אם אור מנורה או נורה רגילה או פלואורנית משתקף מלוח התצוגה של מכונת הכביסה, סמארטפון עלול שלא לזהות את הודעת השגיאה שעל גבי לוח התצוגה בקלות.
   - אם אתה מחזיק את הסמארטפון בזווית גדולה מדי ביחס לחזית לוח התצוגה, הוא עלול שלא לזהות את קוד השגיאה. להשגת התוצאות הטובות ביותר החזק את הסמארטפון כך שהוא יקביל או כמעט יקביל לחזית לוח התצוגה.

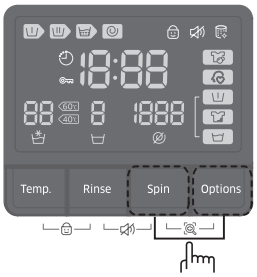

3 שניות

WW70H5200EW-03409D_HE.indd 24 2014/7/30 17:01:48

Eco Bubble

הודות ל-Eco Bubble חומרי הכביסה מתפזרים בצורה שווה וחודרים מהר יותר ועמוק יותר לסיבי הבד.

פונקציית הבועות זמינה בכל התוכניות למעט תוכנית ECO DRUM CLEAN (ניקוי תוף ידידותי לסביבה) זמינות הפונקציה מפורטת בטבלה הבאה.

*WW70H5200E:

תוכנית	פונקציית בועות	ביטול פונקציית הבועות
COTTON(כותנה),SYNTHETICS(סינתטי), BEDDING(מצעים), DAILY WASH(כביסה רגילה), DARK GARMENT(בגדים כהים)	זמינה	זמינה
COTTON(כותנה), WOOL(צמר), SUPER ECO WASH(כביסה חסכונית במיוחד), OUTDOOR CARE(בגדי טיול ועבודה), BABY CARE(בגדי תינוקות), DELICATES(בדים עדינים), STAIN AWAY (הסרת כתמים)		לא זמינה
ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה)	לא זמינה	-

- ייתכן שפונקציית בועות שונה תיושם בהתאם לתוכנית.

הבחירה ב־Eco Bubble היא ברירת מחדל. לחץ על הכפתור פעם אחת כדי להפעיל את מכונת הכביסה ופעם נוספת כדי לכבותה.

1. פתח את הדלת, הכנס את הכביסה לתוף וסגור את הדלת.
2. לחץ על הכפתור **הפעלה/כיבוי(⏻)** .
3. בחר פונקציה.
4. הכנס כמות מתאימה של אבקת כביסה ומרכך כביסה לתאים המתאימים בהתאם לכמות הכביסה וסגור את מגירת חומרי הכביסה.
   - הוסף כמות מתאימה של אבקת כביסה לתא אבקת הכביסה Ⅱ, והוסף את מרכך הכביסה לתא המרכך ❀ רק עד למפלס המרכך המרבי המצוין על־ידי קו הקצה התחתון (MAX) של "A".
   - אם בחרת בתוכנית Prewash (שטיפה מוקדמת), הוסף אבקת כביסה לתא השטיפה המקדימה Ⅰ בנוסף.
   - לכביסה באמצעות נוזל כביסה, השאר את תיבת נוזל הכביסה במגירה (עיין בסעיף "נוזל כביסה" בעמוד 29).

אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.

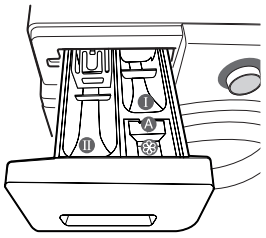

5. לחץ על הכפתור התחלה/השהייה.
   - לחץ על כפתור **התחלה/השהייה(⏯)** כדי להתחיל את פעולת הכביסה.
   - מתבצע זיהוי אוטומטי של כמות הכביסה ופעולת הכביסה מתחילה.
   - לאחר שפעולת מכונת הכביסה מתחילה, לא ניתן להוסיף או לבחור את פונקציית הבועות.

- אם מוסיפים אבקת כביסה בכמות שצוינה, נוצרת כמות מספקת של בועות.
- יש לנקות את מסנן פסולת לעתים קרובות. ניקוי מעת לעת מסייע ליצירת כמות מספקת של בועות.
- בהתאם לכמות אבקת הכביסה וכמות הכביסה, ייתכן שהבועות ייספגו ויראו ככמות קטנה.
- אף שבועות נוצרות מיד עם תחילת פעולת הכביסה, ייתכן שיחלפו כמה דקות עד שתבחין בהן.

WW70H5200EW-03409D_HE.indd 25 2014/7/30 17:01:49

כביסה

כביסה בעזרת בורר תוכניות הכביסה

מכונת הכביסה החדשה שלך הופכת את הכביסה לקלה הודות למערכת הבקרה האוטומאטית "Fuzzy Control (בקרה אוטומאטית)" של Samsung. כאשר אתה בוחר תוכנית כביסה, המכונה תקבע את הטמפרטורה, זמן הכביסה ומהירות הכביסה.

1. פתח את ברז המים בכיור.
2. לחץ על הכפתור **הפעלה/כיבוי(⏻)** .
3. פתח את הדלת.
4. הכנס למכונה את הפריטים לכביסה אחד אחרי השני ומבלי לחרוג מהקיבולת המותרת.
5. סגור את הדלת.
6. הוסף לתאים המתאימים אבקת כביסה, מרכך, וחומר כביסה לשטיפה מוקדמת (במידת הצורך).

שטיפה מוקדמת זמינה רק בבחירת התוכניות COTTON (כותנה), COTTON(כותנה), SYNTHETICS(סינתטי), BEDDING(מצעים), SUPER ECO WASH(כביסה חסכונית במיוחד), BABY CARE(בגדי תינוקות), DAILY WASH(כביסה רגילה), DARK GARMENT(בגדים כהים), STAIN AWAY (הסרת כתמים). יש להשתמש באפשרות זאת עם בגדים מלוכלכים מאוד.

7. השתמש ב- **Cycle Selector (בורר תוכנית הכביסה)** כדי לבחור את התוכנית המתאימה בהתאם לסוג הכביסה: COTTON(כותנה), COTTON(כותנה), SYNTHETICS(סינתטי), BEDDING(מצעים), WOOL(צמר), SUPER ECO WASH(כביסה חסכונית במיוחד), OUTDOOR CARE(בגדי טיול ועבודה), BABY CARE(בגדי תינוקות) , DELICATES(בדים עדינים), DAILY WASH(כביסה רגילה), DARK GARMENT(בגדים כהים), STAIN AWAY (הסרת כתמים). המחוונים המתאימים יאירו על לקוח הבקרה.
8. כעת תוכל לשלוט על טמפרטורת הכביסה, מספר השטיפות, מהירות הסחיטה וזמן ההשהיה באמצעות לחיצה על הכפתורים המתאימים.
9. לחץ על הכפתור **התחלה/השהייה(⏯)** כדי להתחיל בכביסה. מחוון התהליך יאיר והזמן שנותר עד לסיום תוכנית הכביסה יוצג על התצוגה.

אפשרות ההשהיה

במהלך 5 הדקות הראשונות לכביסה, ניתן להוסיף/להוציא פריטים מהמכונה.

1. לחץ על הכפתור **התחלה/השהייה(⏯)** כדי לפתוח את נעילת הדלת.

לא ניתן לפתוח את הדלת כאשר המים חמים מדי או כאשר גובה המים גבוה מדי.

2. לאחר סגירת הדלת לחץ על הכפתור **התחלה/השהייה(⏯)** כדי לחזור ולהפעיל את תוכנית הכביסה.

עם סיום תוכנית הכביסה:

עם סיומה של תוכנית הכביסה, המכונה תכבה אוטומאטית.

1. פתח את הדלת.
2. הוצא את הכביסה.

WW70H5200EW-03409D_HE.indd 26 2014/7/30 17:01:49

הגדרות כביסה ידניות

ניתן לכבס בגדים ידנית מבלי להשתמש ב-Cycle Selector (בורר תוכנית הכביסה).

1. פתח את ברז אספקת המים.
2. לחץ על הכפתור **הפעלה/כיבוי(⏻)** שעל מכונת הכביסה.
3. פתח את הדלת.
4. הכנס למכונה את הפריטים לכביסה אחד אחרי השני ומבלי לחרוג מהקיבולת המותרת.
5. סגור את הדלת.
6. הוסף לתאים המתאימים אבקת/נוזל כביסה ובמידת הצורך גם נוזל השריה.
7. לחץ על הכפתור **.Temp (טמפרטורה)** כדי לבחור את הטמפרטורה הרצויה.
   (מים קרים: 20°C, 30°C, 40°C, 60°C ו-95°C)
8. לחץ על כפתור **Rinse(שטיפה)** לבחירה במספר מחזורי השטיפה המבוקש.
   מספר מחזורי השטיפה המרבי הוא חמישה.
   זמן הכביסה יתארך בהתאם.
9. לחץ על הכפתור **Spin(סחיטה)** כדי לבחור את מהירות הסחיטה הרצויה.(⊘ : ללא סחיטה; ⍁ :עצור לאחר שטיפה)
10. לחץ לסירוגין על הכפתור **Delay End (השהיית סיום)** כדי לעבור בין האפשרויות הזמינות . השעה המוצגת מציינת את שעת סיום תוכנית הכביסה
11. לחץ על הכפתור **התחלה/השהייה(⏯)** כדי להתחיל בתוכנית הכביסה.

הנחיות כביסה

פעל על פי ההנחיות הפשוטות שלהלן לקבלת הכביסה הנקייה והיעילה ביותר.

לפני הכביסה בדוק תמיד את ההנחיות על תווית הבגד.

מיין את הפריטים וכבס אותם לפי הקריטריונים הבאים:

- תווית הבגד: מיין את הכביסה לפי סוג הבד: כותנה, סיבים מעורבים, סינתטיים, משי, צמר ומשי מלאכותי.
- צבע: יש להפריד בין הבדים הלבנים והצבעוניים. פריטים צבעוניים חדשים יש לכבס בנפרד.
- גודל: שילוב של פריטים בגדלים שונים באותו מחזור כביסה ישפר את תוצאות הכביסה.
- רגישות: כבס פריטים עדינים בנפרד. השתמש בתוכנית הכביסה Delicate(בדים עדינים) עבור בדי צמר, וילונות ומשי. בדוק את התוויות על הפריטים, או פנה לנספח טבלת הטיפול בבדים.

ריקון כיסים

לפני כל כביסה רוקן את כל הכיסים של פריטי הלבוש. חפצים קטנים, קשים ובעלי צורה לא שגרתית כגון, מטבעות, סכינים ואטבי נייר עלולים לגרום נזק למכונת הכביסה. אין לכבס בגדים עם אבזמים, כפתורים, או חלקים מתכתיים כבדים גדולים אחרים.

המתכת שעל הבגדים עלולה לגרום נזק לבגדים ולתוף של מכונת הכביסה. הפוך בגדים בעלי כפתורים ורקמות לפני הכביסה. רוכסנים פתוחים בזמן הכביסה עלולים לגרום נזק לסל הסחיטה. לפני הכביסה יש לרכוס רוכסנים ולקבע אותם בעזרת חוט.

פרטי לבוש עם שרוכים ארוכים עלולים להסתבך ולגרום נזק אחד לשני. דאג לקבע את השרוכים לפני הכביסה.

השרית בדי כותנה

השילוב בין מכונת הכביסה החדשה שלך ואבקות/נוזלי הכביסה החדשים מסתכם בתוצאות כביסה מושלמות, וחוסך באנרגיה, זמן, מים ואבקת/נוזל כביסה. אולם, אם בדי הכותנה שלך מלוכלכים במיוחד, השרה אותם עם אבקת/נוזל כביסה מבוסס חלבון.

WW70H5200EW-03409D_HE.indd 27 2014/7/30 17:01:49

כביסה

קביעת קיבולת המכונה

אין לטעון כמות כביסה גדולה מדי למכונה. היא עלולה שלא לתפקד כנדרש. השתמש בטבלה שלהלן כדי לקבוע את קיבולת מכונת הכביסה בהתאם לסוג הכביסה.

סוג הבד	קיבולת
דגם	WW70H5200E*
COTTON(כותנה) **- דרגת לכלוך קלה/בינונית** **- דרגת לכלוך גבוהה**	7.0 ק"ג
SYNTHETICS(סינתטי)	3.0 ק"ג
BEDDING(מצעים)	2.0 ק"ג
WOOL(צמר)	2.0 ק"ג
OUTDOOR CARE(בגדי טיול ועבודה)	2.0 ק"ג
BABY CARE(בגדי תינוקות)	3.0 ק"ג
DELICATES(בדים עדינים)	2.0 ק"ג

- כאשר הכביסה אינה מפוזרת בצורה מאוזנת (המחוון "**UE**" מאיר על התצוגה), פזר את הכביסה מחדש.
  אם התכולה אינה מאוזנת, יעילות הסחיטה עלולה להיפגע.
- בכביסת מצעים או שמיכות פוך, זמן הכביסה עשוי להתארך ויעילותה של הסחיטה עשויה להיות נמוכה יותר.
- עבור מצעים או שמיכות פוך, התכולה המומלצת היא 2.5(ק"ג) או פחות.

חזיות (לשטיפה במים) יש לכבס בתוך רשת כביסה (לרכישה בנפרד).

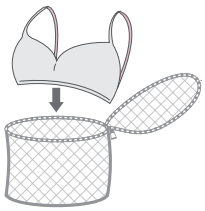

- חלקיהן המתכתיים של החזיות עלולים לגרום נזק לפריטי הכביסה האחרים. לכן יש למקמן בתוך רשת כביסה.
- פרטי לבוש קטנים וקלים כגון, גרביים, כפפות, גרביונים ומטפחות עלולים להיתקע באזור שליד הדלת. יש להכניסם לתוך רשת כביסה עדינה.

אזהרות אין לכבס את רשת הכביסה לבד ללא פריטים נוספים. תיתכנה רעידות חריגות אשר עלולות לגרום למכונה לזוז ממקומה וכתוצאה מכך לפגיעה גופנית.

מידע אודות אבקת/נוזל ותוספי כביסה

באיזה אבקת/נוזל כביסה להשתמש

יש להשתמש באבקת/נוזל כביסה בהתאם לסוג הבד (כותנה, סינתטי, עדין, צמר), צבע הבד, טמפרטורת הכביסה ודרגת הלכלוך. יש להשתמש תמיד באבקת/נוזל כביסה שאינו מקציף, המיועד לשימוש במכונות כביסה אוטומאטיות.

פעל על פי המלצות יצרן אבקת/נוזל הכביסה בהתאם לסוג הכביסה, דרגת הלכלוך וקשיות המים באזורך. אם אינך יודע מהי דרגת הקשיות של המים באזורך, ברר זאת ברשות המים באזורך.

אין להשתמש באבקת/נוזל כביסה שהתקשו או התמצקו, הם עלולים שלא להישטף בזמן מחזור השטיפה. בנוסף תתכן פגיעה באיכות השטיפה של המכונה, או סתימה שעלולה לגרום להצפה.

WW70H5200EW-03409D_HE.indd 28 2014/7/30 17:01:49

מגירת חומרי הכביסה

מכונת הכביסה מכילה תא נפרד לאבקת/נוזל הכביסה ותא נפרד למרכך הכביסה. הוסף את כל חומרי הכביסה לתאים המתאימים לפני הפעלת המכונה.

אל תפתח את מגירת חומרי הכביסה כאשר מכונת הכביסה פועלת, שבן אתה עלול לבוא במגע עם מים חמים או קיטור.

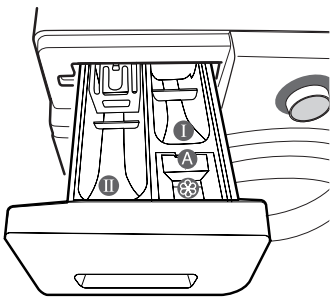

1. פתח את מגירת אבקת/נוזל הכביסה שנמצאת בחלקו השמאלי של לוח הבקרה.
2. הוסף את הכמות המומלצת של אבקת/נוזל הכביסה ישירות לתא אבקת/נוזל הכביסה Ⅱ לפני הפעלתה של המכונה.

לכביסה באמצעות נוזל כביסה, השתמש בתיבת נוזל הכביסה (עיין בסעיף "נוזל כביסה" לאיתור הדגם המתאים).

- אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.

3. הוסף את הכמות המומלצת של נרכל הכביסה ישירות לתא מרכך הכביסה ❀ לפני הפעלתה של המכונה. אל תחרוג מקו המילוי המרבי (Ⓐ).

זהירות אל תוסיף שום **חומר כביסה** (אבקה או נוזל) לתא המרכך(❀).

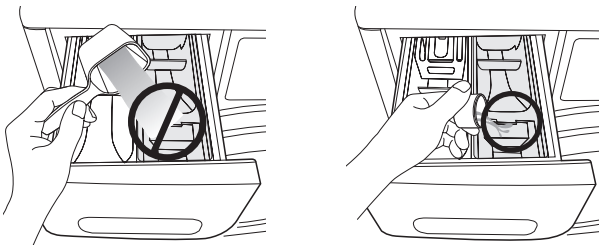

4. בעת שימוש באפשרות 'שטיפה מוקדמת', הוסף את הכמות המומלצת של חומר הכביסה לתא השטיפה המקדימה Ⅰ.

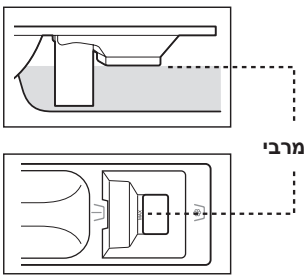

בכביסתם של פריטים גדולים אין להשתמש בסוגי אבקות/נוזלי הכביסה הבאים.

- טבליות או כמוסות של אבקת כביסה
- אבקות כביסה בתוך כדור ורשת

חובה לדלל מרככי כביסה מרוכזים וסמיכים במעט מים לפני הכנסתם לתא ההזנה (כדי למנוע סתימה).

שים לב כי מרכך הכביסה אינו עולה על גדותיו, בעת סגירת המגירה של חומרי הכביסה לאחר הוספת מרכך כביסה לתא המרכך.

נוזל כביסה (בדגמים נבחרים)

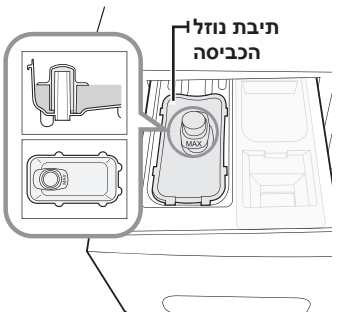

לכביסה באמצעות נוזל כביסה, הנח את תיבת נוזל הכביסה בתוך אזור חומר הכביסה העיקרי של מגירת חומרי הכביסה ושפוך נוזל כביסה לתיבת נוזל הכביסה.

- אל תשפוך נוזל מעל קו המילוי המרבי.
- בעת שימוש באבקת כביסה, הסר את תיבת נוזל הכביסה ממגירת חומרי הכביסה. אם תיבת נוזל הכביסה נשארת בפנים, נמנעת הזנה של אבקת הכביסה.
- בתום הכביסה, עשוי להישאר מעט נוזל במגירת חומרי הכביסה.

WW70H5200EW-03409D_HE.indd 29 2014/7/30 17:01:50

ניקוי ותחזוקת מכונת הכביסה

שמירת ניקיונה של מכונת הכביסה משפר את ביצועיה, מונע תקלות מיותרות ומאריך את חייה.

ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה)

תוכנית זו היא תוכנית ניקוי עצמי להסרת עובש שעלול להיווצר בתוך מכונת הכביסה.

1. לחץ על הכפתור **הפעלה/כיבוי(⏻)** .
2. כוון את בורר התוכניות לתוכנית ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה).
   - באפשרותך להשתמש רק בפוקנציה Delay End (השהיית סיום).
   - ECO DRUM CLEAN (ניקוי תוף ידידותי לסביבה) מוגדרת ל-70˚C.

במהלך מחזור Eco Bubble טמפרטורת המים מכוונת ל-70˚C, אבל בגלל מאפייני מכונת הכביסה ניתן לראות בתצוגה בלוח הבקרה רק 60˚C. לא ניתן לשנות את הטמפרטורה.

- כאשר מכניסים בגדים לתוך המכונה תיקבע באופן אוטומטי תוכנית כותנה 30˚C עם כמות מים בינונית.

3. שפוך כמות מתאימה של תכשיר ניקוי לתא אבקת הכביסה Ⅱ וסגור את מגירת חומרי הכביסה (בעת ניקוי התוף באמצעות תכשיר ניקוי).
   - הקפד להשתמש בתכשיר הניקוי המומלץ לניקוי תוף.
   - קיימים תכשירי ניקוי בצורת אבקה ובצורת נוזל לניקוי התוף. ניתן להשתמש בתכשיר הניקוי בצורת נוזל רק עם תיבת נוזל הכביסה (אופציונלי).

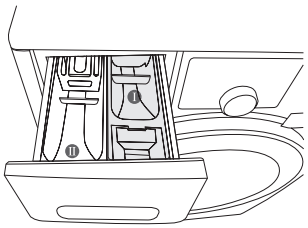

4. לחץ על הכפתור **התחלה/השהיה(⏯)**.
   - לאחר שתלחץ על כפתור **התחלה/השהייה(⏯)**, התוכנית ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה) תתחיל לפעול.

- תוכנית ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה) מאפשרת לנקות את התוף מבלי להשתמש בתכשיר ניקוי.
- לעולם אל תשתמש בתוכנית ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה) כאשר יש כביסה במכונת הכביסה. פעולה זו עלולה לגרום נזק למרקם הכביסה או לבעיה במכונת הכביסה.
- **לעולם אל תשתמש בחומר כביסה רגיל בתוכנית ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה).**
- **השתמש רק בעשירית הכמות של תכשיר הניקוי לתוף המומלצת על-ידי יצרן תכשיר הניקוי.**

זהירות

- מאחר ששימוש בחומר הלבנה על-בסיס כלור עלול לגרום לשינוי צבע במוצר, הקפד להשתמש רק בחומרי הלבנה על בסיס חמצן.
- תכשיר ניקוי מסוג אבקה: השתמש ב[חומר הלבנה מסוג אבקה] או ב [תכשיר ניקוי המיועד לניקוי תוף בלבד].
- תכשיר ניקוי מסוג נוזל: השתמש ב[חומר הלבנה על-בסיס חמצן מסוג נוזל] או ב [תכשיר ניקוי המיועד לניקוי תוף בלבד].

WW70H5200EW-03409D_HE.indd 30 2014/7/30 17:01:51

פונקציית ההתראה האוטומטית של ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה)

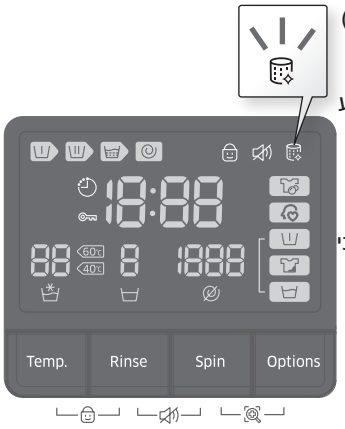

- אם המחוון של "ECO DRUM CLEAN" (ניקוי תוף ידידותי לסביבה) על-גב׳ התצוגה והנורית על בורר התוכניות מאירים לאחר כביסה, פירוש הדבר כי נדרש ניקוי תוף. במקרה זה, הוצא את הכביסה ממכונת הכביסה, לחץ על לחצן ההפעלה ונקה את התוף על-ידי ביצוע תוכנית ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה).
- אם לא תבצע את תוכנית ECO DRUM CLEAN (ניקוי תוף ידידותי לסביבה), המחוון של "ECO DRUM CLEAN" על-גב׳ התצוגה והנורית על בורר התוכניות ייכבו. אולם, לאחר שתי הפעלות של מכונת הכביסה, המחוון של ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה) על-גבי התצוגה והנורית על בורר התוכניות יאירו שוב. אין לכך השפעה על פעולת מכונת הכביסה.
- אף שבדרך כלל, ההתראה האוטומטית של ECO DRUM CLEAN(ניקוי תוף ידידותי לסביבה) מופיעה אחת לחודש בקירוב, פרק זמן זה עשוי להשתנות בהתאם לתדירות השימוש במכונת הכביסה.

• במקרה של התראה, נקה גם את מסנן הפסולת (עיין בסעיף "ניקוי מסנן הפסולת" בעמוד 32). אם לא תעשה כן, הביצועים של פונקציית הבועות עלולים להיפגע.

ניקוז מכונת הכביסה במקרה חירום

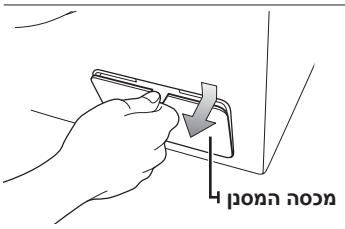

1. נתק את מכונת הכביסה משקע החשמל.
2. פתח את מכסה המסנן על-ידי לחיצה כלפי מטה ומשיכת הידית.

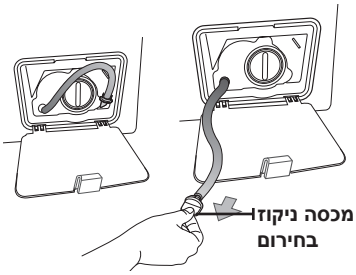

3. פתח את הפקק של צינור ניקוז החירום על-ידי משיכתו.

4. אחוז בפקק שבקצה צינור ניקוז המים בחירום ומשוך אותו החוצה בזהירות.
5. נקז את כל המים לכלי או קערה.

כמות המים עשויה להיות גדולה מהצפוי. הכן קערה גדולה.

6. חבר מחדש את הפקק של צינור ניקוז החירום והכנס את צינור הניקוז.
7. סגור את מכסה המסנן.

WW70H5200EW-03409D_HE.indd 31 2014/7/30 17:01:52

ניקוי ותחזוקת מכונת הכביסה

ניקוי מסנן הפסולת

אנו ממליצים לנקות את מסנן הפסולת 5 או 6 פעמים בשנה, או כאשר מוצגת הודעת השגיאה "**5E**". (עיין בסעיף הקודם: "ניקוז מכונת הכביסה במקרה חירום".)

אם חומר זר מצטבר במסנן הפסולת, הביצועים של פונקציית הבועות עלולים להיפגע.

זהירות לפני ניקוי מסנן הפסולת, הקפד לנתק את כבל החשמל.

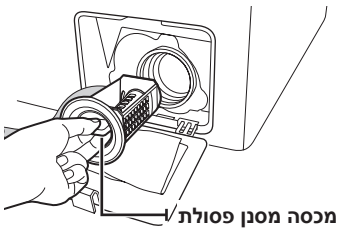

1. תחילה נקז את המים המיותרים(עיין בסעיף "ניקוז מכונת הכביסה במקרה חירום" בעמוד 31).

   אם תפריד את המסנן מבלי לנקז את יתרת המים, הם עלולים לזרום החוצה.

2. פתח את מכסה המסנן בעזרת מטבע או מפתח.
3. הברג החוצה את מכסה הניקוז בחירום על ידי סיבובו שמאלה ונקז את כל המים.
4. הברג החוצה את מכסה מסנן הפסולת.

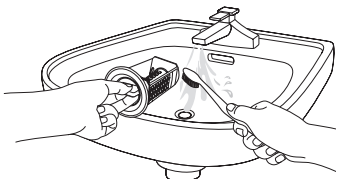

5. שטוף ונקה את הלכלוך ממסנן הפסולת. וודא כי מדחף משאבת הניקוז שנמצא מאחורי מסנן הפסולת אינו חסום.
6. הברג את מכסה מסנן הפסולת חזרה למקומו.
7. סגור את מכסה המסנן.

זהירות אל תפתח את פקק מסנן הפסולת כאשר מכונת הכביסה פועלת, שכן מים חמים עלולים לזרום החוצה.

- הקפד להחזיר את מכסה המסנן למקומו לאחר ניקוי המסנן. מסנן שלא יוחזר למקומו, עלולה לגרום לנזילת מים או לתקלה בפעולת מכונת הכביסה.
- לאחר ניקוי המסנן יש להרכיב את המסנן במלואו.

ניקוי חלקה החיצוני של מכונת הכביסה

1. יש לנגב את משטחיה החיצונים של מכונת הכביסה, כולל לוח הבקרה, בעזרת מטלית רכה וחומר ניקוי ביתי שאינו שוחק.
2. יש לייבש את המשטחים בעזרת ניגוב במטלית רכה.
3. אין לשפוך מים לתוך מכונת הכביסה.

WW70H5200EW-03409D_HE.indd 32 2014/7/30 17:01:52

ניקוי גומחת ומגירת אבקת/נוזל הכביסה

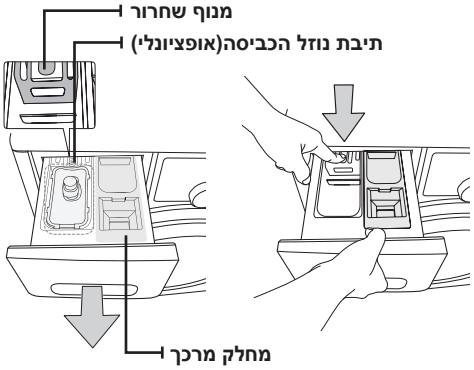

1. לחץ על מנוף השחרור בחלקה הפנימי של מגירת אבקת/נוזל הכביסה ומשוך את המגירה החוצה.
2. הסר את המחיצה המפרידה של המרכך ואת תיבת נוזל הכביסה (אופציונלי) ממגירת חומרי הכביסה.

3. שטוף את כל החלקים במים זורמים.

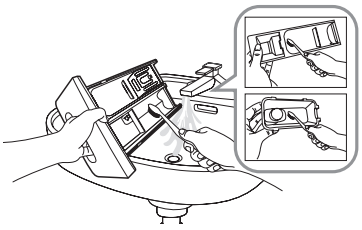

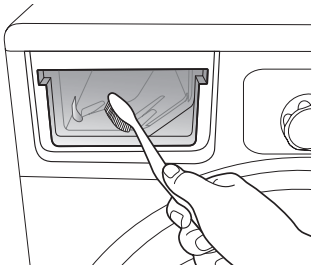

4. נקה את גומחת המגירה בעזרת מברשת שיניים ישנה.
5. החזר את המחיצה המפרידה של המרכך ואת תיבת נוזל הכביסה (אופציונלי) למקומן על-ידי דחיפתן בכוח לתוך המגירה.
6. החזר את המגירה חזרה למקומה.
7. נקה את כל שאריות אבקת/נוזל הכביסה. הפעל תוכנית כביסה מלאה כשהמכונה ריקה.

ניקוי מסנן הרשת של צינור המים

יש לנקות את מסנן הרשת של צינור המים לפחות פעם בשנה, או כאשר מוצגת הודעת השגיאה "**4E**":

1. סגור את ברז אספקת המים של מכונת הכביסה.
2. הברג החוצה ונתק את צינור המים מחלק האחורי של מכונת הכביסה. כדי למנוע ממים לגלוש החוצה עקב לחץ האוויר בצינור, כסה את הצינור בבד.
3. משוך בעדינות את מסנן הרשת מקצהו של הצינור בעזרת מלקחים או צבת ושטוף אותו במים זורמים עד שיהיה נקי. נקה גם את חלקו הפנימי והחיצוני של המחבר המתברג.
4. הרכב את המסנן חזרה למקומו.
5. הברג חזרה את הצינור למכונת הכביסה.
6. וודא כי המחברים מהודקים היטב, ופתח את הברז.

WW70H5200EW-03409D_HE.indd 33 2014/7/30 17:01:54

ניקוי ותחזוקת מכונת הכביסה

תיקון מכונת כביסה שקפאה

אם הטמפרטורות צונחות מתחת לנקודת הקיפאון של המים ומכונת הכביסה שלך קפאה:

1. נתק את מכונת הכביסה מהחשמל.
2. שפוך מים חמים על הברז כדי לשחרר את צינור אספקת המים.
3. נתק את צינור אספקת המים והשרה אותו במים חמים.
4. שפוך מים חמים לתוך תוף מכונת הכביסה והמתן 10 דקות.
5. חבר מחדש את צינור אספקת המים אל ברז המים ובדוק את תקינות אספקת וניקוז המים.

אחסון מכונת הכביסה

אם אתה מתכוון לאחסן את מכונת הכביסה שלך למשך פרק זמן ממושך, כדאי לנקזה ולנתקה מהחשמל והצנרת. שאריות מים בצנרת ובחלקיה הפנימיים של המכונה עלולים לגרום לה נזק במהלך האחסון.

1. בחר במחזור הכביסה **COTTON (כותנה)** ולחץ על הלחצן **Quick Wash (כביסה מהירה)** והרץ את מחזור הכביסה כשהמכונה ריקה.
2. סגור את ברזי המים ונתק את הצינורות.
3. נתק את המכונה משקע החשמל והשאר את דלת המכונה פתוחה כדי לאפשר את ייבוש התוף.

אם מכונת הכביסה אוחסנה בטמפרטורה שמתחת לאפס מעלות צלזיוס, המתן ואפשר לכל שאריות המים להתאדות לפני השימוש במכונה.

WW70H5200EW-03409D_HE.indd 34 2014/7/30 17:01:54

קודי מידע ואיתור ופתרון תקלות

קרא בעיון את הסעיפים הבאים אם מכונת הכביסה שלך...

הבעיה	פתרון
לא ניתן להפעיל את המכונה	• וודא כי מכונת הכביסה מחוברת לחשמל. • וודא כי דלת המכונה סגורה לגמרי. • וודא כי ברז(י) אספקת המים פתוחים. • וודא כי לחת על הכפתור התחלה/השהייה.
אין אספקת מים, או שאין מספיק מים	• פתח את ברז אספקת המים במלואו. • וודא כי צינור אספקת המים אינו קפוא. • ישר את צינור אספקת המים. • נקה את המסנן של צינור אספקת המים.
אבקת/נוזל הכביסה נשאר במגירת אבקת/נוזל הכביסה לאחר סיומה של תוכנית הכביסה	• וודא כי מכונת הכביסה פועלת בלחץ מים מספק. • וודא כי אבקת/נוזל הכביסה הוסף למרכזה של מגירת אבקת/נוזל הכביסה.
המכונה רועדת או מרעישה יתר על המידה	• וודא כי מכונת הכביסה מוצבת על משטח מישורי. אם המשטח אינו מישורי, התאם את גובהה של רגל מכונת הכביסה כדי לאזנה. • וודא כי בורגי התובלה הוסרו. • וודא כי מכונת הכביסה אינה באה במגע עם חפצים אחרים. • וודא כי תכולת הכביסה מפוזרת באופן אחיד.
מכונת הכביסה אינה מנקזת ו/או סוחטת	• יישר את כבל הניקוז. דאג לשחרר צינורות מקופלים ומפותלים. • וודא כי מסנן הפסולת אינו סתום.
הדלת נעולה או שאינה נפתחת.	• הדלת תיפתח רק 3 דקות לאחר שהמכונה עוצרת את פעולתה או שהחשמל מנותק.

אם הבעיה ממשיכה צור קשר עם מרכז השירות של Samsung באזורך.

WW70H5200EW-03409D_HE.indd 35 2014/7/30 17:01:54

קודי מידע ואיתור ופתרון תקלות

קודי מידע

כאשר מכונת הכביסה מתקלקלת, יתכן שקוד שגיאה יוצג על התצוגה. במקרה כזה עיין בטבלה הבאה לפני יצירת קשר עם מרכז השירות.

הקוד	הפתרון
dE	• וודא כי דלת המכונה סגורה לגמרי. • וודא כי הכבסים לא נתקעו בדלת המכונה.
4E	• וודא כי ברז(י) אספקת המים פתוחים. • בדוק את לחץ המים. • נקה את מסנני הרשת של צינור המים.
5E	• נקה את מסנן הפסולת. • וודא כי צינור הניקוז מותקן בצורה הנכונה. • ניקוי מסנן הרשת של צינור המים
UE	• תכולת הכביסה אינה מאוזנת. פזר מחדש את תכולת הכביסה. אם יש צורך לכבס רק פריט ביגוד בודד כגון חלוק רחצה, או זוג מכנסי ג'ינס, יתכן שתוצאת הסחיטה לא תהיינה משביעת רצון וקוד השגיאה "UE" יוצג על התצוגה.
cE/3E	• התקשר לשירות הלקוחות.
Sd/Sud	• הודעה זו מופיעה כאשר מתגלה כמות רבה מיד של קצף. היא מוצגת גם כאשר הקצף מסולק. כאשר מסתיים הסילוק, המחזור הרגיל ממשיך. (זו אחת הפעולות הרגילות. זו הודעת שגיאה למניעת תקלות הנובעות מאי-חישה.
Uc	• אם מתח החשמל אינו יציב, מכונת הכביסה תפסיק לפעול באופן זמני כדי להגן על החלקים החשמליים שלה. • אם יסופק המתח המתאים, המחזור ישוב לפעול באופן אוטומטי.

אם נתקלת בקוד שאינו מופיע בטבלה שלעיל, או אם הפתרון המוצע לא עזר, התקשר למרכז השירות של Samsung, או למשווק Samsung באזורך.

WW70H5200EW-03409D_HE.indd 36 2014/7/30 17:01:54

טבלת תוכניות הכביסה

טבלת תוכניות הכביסה

(●אפשרות משתמש)

*WW70H5200E:

תוכנית	תכולה מרבית (ק"ג)	אבקת/נוזל כביסה			טמפרטורה מק־סימאלית (°C)	מהירות סחיטה (מרבית) סל"ד
	*WW70H5200E	שטיפה מוקדמת	כביסה	מרכך		*WW70H5200E
COTTON(כותנה)	7.0	●	כן	●	95	1200
COTTON(כותנה)	7.0	●	כן	●	60	1200
SYNTHETICS(סינתטי)	3.0	●	כן	●	60	1200
BEDDING(מצעים)	2.0	●	כן	●	40	800
WOOL (צמר)	2.0	-	כן	●	40	800
ECO DRUM CLEAN (ניקוי תוף ידידותי לסביבה)	-	-	כן	-	70	400
SUPER ECO WASH (כביסה חסכונית במיוחד)	3.0	●	כן	●	40	1200
OUTDOOR CARE (בגדי טיול ועבודה)	2.0	-	כן	●	40	1200
BABY CARE(בגדי תינוקות)	3.0	●	כן	●	95	1200
DELICATES(בדים עדינים)	2.0	-	כן	●	40	400
DAILY WASH(כביסה רגילה)	2.0	●	כן	●	60	1200
DARK GARMENT(בגדים כהים)	3.0	●	כן	●	40	1200
STAIN AWAY (הסרת כתמים)	4.0	●	כן	●	60	1200

תוכנית	Eco Bubble	Delay End (השהיית סיום)	גיהוץ קל	שטיפה מוגברת	השריה	Quick Wash(כביסה מהירה)
COTTON(כותנה)	●	●	●	●	●	●
COTTON(כותנה)	●	●	●	●	●	-
SYNTHETICS(סינתטי)	●	●	●	●	●	-
BEDDING(מצעים)	●	●	●	●	●	-
WOOL (צמר)	●	●	-	-	-	-
ECO DRUM CLEAN (ניקוי תוף ידידותי לסביבה)	-	●	-	-	-	-
SUPER ECO WASH (כביסה חסכונית במיוחד)	●	●	●	●	●	-
OUTDOOR CARE (בגדי טיול ועבודה)	●	●	-	-	-	-
BABY CARE(בגדי תינוקות)	●	●	●	●	●	-
DELICATES(בדים עדינים)	●	●	-	-	-	-
DAILY WASH(כביסה רגילה)	●	●	●	●	●	-
DARK GARMENT(בגדים כהים)	●	●	●	●	-	-
STAIN AWAY (הסרת כתמים)	●	●	●	●	●	-

1. מחזור כביסה עם שלב שטיפה מוקדמת מתארך ב-19 דקות.
2. הנתונים אודות משך הזמן של התוכניות נמדדו תחת התנאים המפורטים בתקנים IEC 60456 / EN 60456.
הפעל את המצב כיול בסיום התקנת המכונה(עמוד 18).
3. תכניות "כותנה" (60 מעלות צלזיוס) ו"Intensive" (מוגברת) פועלות בהתאם ל-EN60456.
4. בבתי הלקוחות אורכן של תוכניות הכביסה עשוי להיות שונה מהערכים שבטבלה לעיל עקב הבדלים בלחץ וטמפרטורת המים, משקל וסוג הכביסה.
5. כאשר נעשה שימוש בפונקצית ה-Intensive (מוגברת), משך הזמן של כל תוכניות הכביסה יתארך.

WW70H5200EW-03409D_HE.indd 37 2014/7/30 17:01:55

נספח

טבלת טיפול בבדים

הסמלים הבאים מורים איך לטפל בבגד. התווית מכילות ארבעה סמלים בסדר הבא: כביסה, הלבנה, ייבוש וגיהוץ וניקוי יבש, במידת הצורך. השימוש במסלים מבטיח עקביות בין יצרני ביגוד שונים, ובין פריטי לבוש ממדינות שונות. פעל על פי ההוראות שעל תווית הבגד כדי להאריך את חייו של הבגד ולהפחית בעיות כביסה.

חומר עמיד		ניתן לגהץ בטמפרטורה מרבית של 100°C	
בד עדין		אסור לגהץ	
ניתן לכבס את הבגד בטמפרטורה של 95°C	95 95	מתאים לניקוי יבש עם כל סוג של ממס	(A)
ניתן לכבס את הבגד בטמפרטורה של 60°C	60 60	לניקוי יבש עם פרכלוריד, דלק מציתים, אלכוהול טהור או R113 בלבד.	(P)
ניתן לכבס את הבגד בטמפרטורה של 40°C	40 40	לניקוי יבש עם דלק תעופה, דלק מטוסים, אלכוהול טהור או R113 בלבד.	(F)
ניתן לכבס את הבגד בטמפרטורה של 30°C	30 30	לא מיועד לניקוי יבש	
מתאים לכביסה ידנית		לייבוש על משטח	
לניקוי יבש בלבד		ניתן לייבש בתלייה	
ניתן להלבין במים קרים	Cl	לייבוש על קולב בגדים	
אסור להלבין		לייבוש במייבש, חום רגיל	
ניתן לגהץ בטמפרטורה מרבית של 200°C		לייבוש במייבש, חום מופחת	
ניתן לגהץ בטמפרטורה מרבית של 150°C		אין לייבש במייבש	

הגנת הסביבה

- מכשיר זה מיוצר מחומרים ממוחזרים. אם תחליט להשליך מוצר זה לפסולת, אנא קרא את התקנות המקומיות בנוגע השלכה לפסולת. חתוך את כבל החשמל כדי שלא ניתן יהיה לחבר את המכשיר לשקע חשמל. פרק את הדלת כדי למנוע מילדים ובעלי חיים קטנים להילכד בתוך המכונה.
- אין להשתמש בכמות אבקת/נוזל כביסה גדולה מהמומלץ בהוראות היצרן.
- השתמש במסירי כתמים ומלבינים בשלב קדם הכביסה רק במקרים שבאמת מחייבים זאת.
- חסוך מים וחשמל על ידי כביסה של תוף מלא בלבד (הכמות המדויקת תלויה בתוכנית הכביסה).

הצהרת תאימות

מכשיר זה תואם לתקנות הבטיחות האירופאית, דירקטיבה 93/68 של האיחוד האירופאי ולתקן EN 60335.

WW70H5200EW-03409D_HE.indd 38 2014/7/30 17:01:58

נספח

מפרט

סוג			מכונת כביסה פתח קדמי	
מידות			*WW70H5200E	
			600 מ"מ (ר) × 550 מ"מ (ע) × 850 מ"מ (ג)	
לחץ מים			50kPa ~ 800kPa	
נפח מים			42 ליטר	
משקל נטו			*WW70H5200E	
			61 ק"ג	
קיבולת כביסה וסחיטה			7.0 ק"ג	
צריכת אנרגיה		דגם	*WW70H5200E	
		כביסה	220 וולט	60 וואט
			240 וולט	60 וואט
		כביסה וחימום	220 וולט	2000 וואט
			240 וולט	2400 וואט
	סחיטה	דגם	*WW70H5200E	
		230 וולט	500 וואט	
	שאיבה		34 וואט	
מהירות סיבוב		דגם	*WW70H5200E	
		סל"ד	1200	

מראה ומפרט המוצר נתונים לשינוי לצורך שיפור המוצר, ללא הודעה מוקדמת.

WW70H5200EW-03409D_HE.indd 39 2014/7/30 17:01:58

הערות

הערות

הערות

הערות

צור קשר עם מרכזי SAMSUNG ברחבי העולם
אם יש לך שאלות או הערות כלשהן בנוגע למוצרי Samsung, אנא צור קשר עם מרכז שירות הלקוחות של Samsung.

מספר קוד:DC68-03409D_HE